

FIG. 1

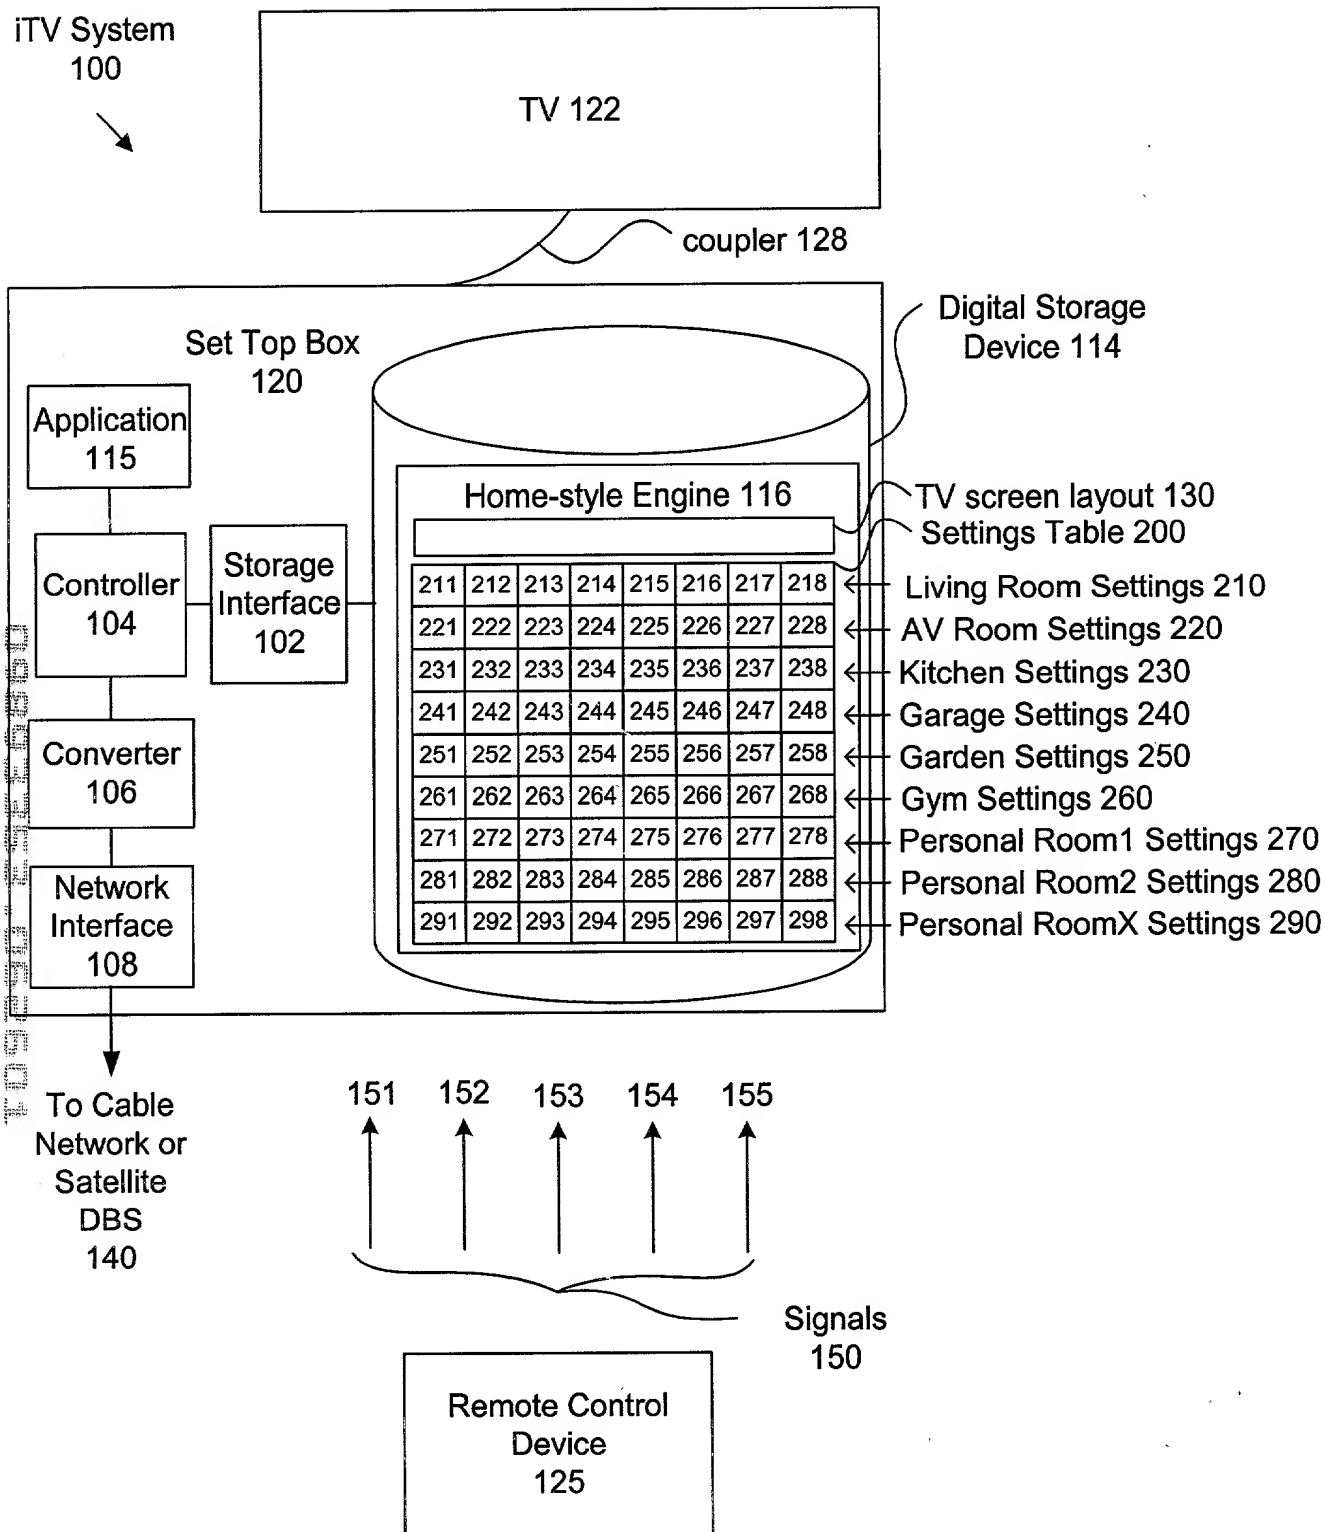 


FIG. 2

300



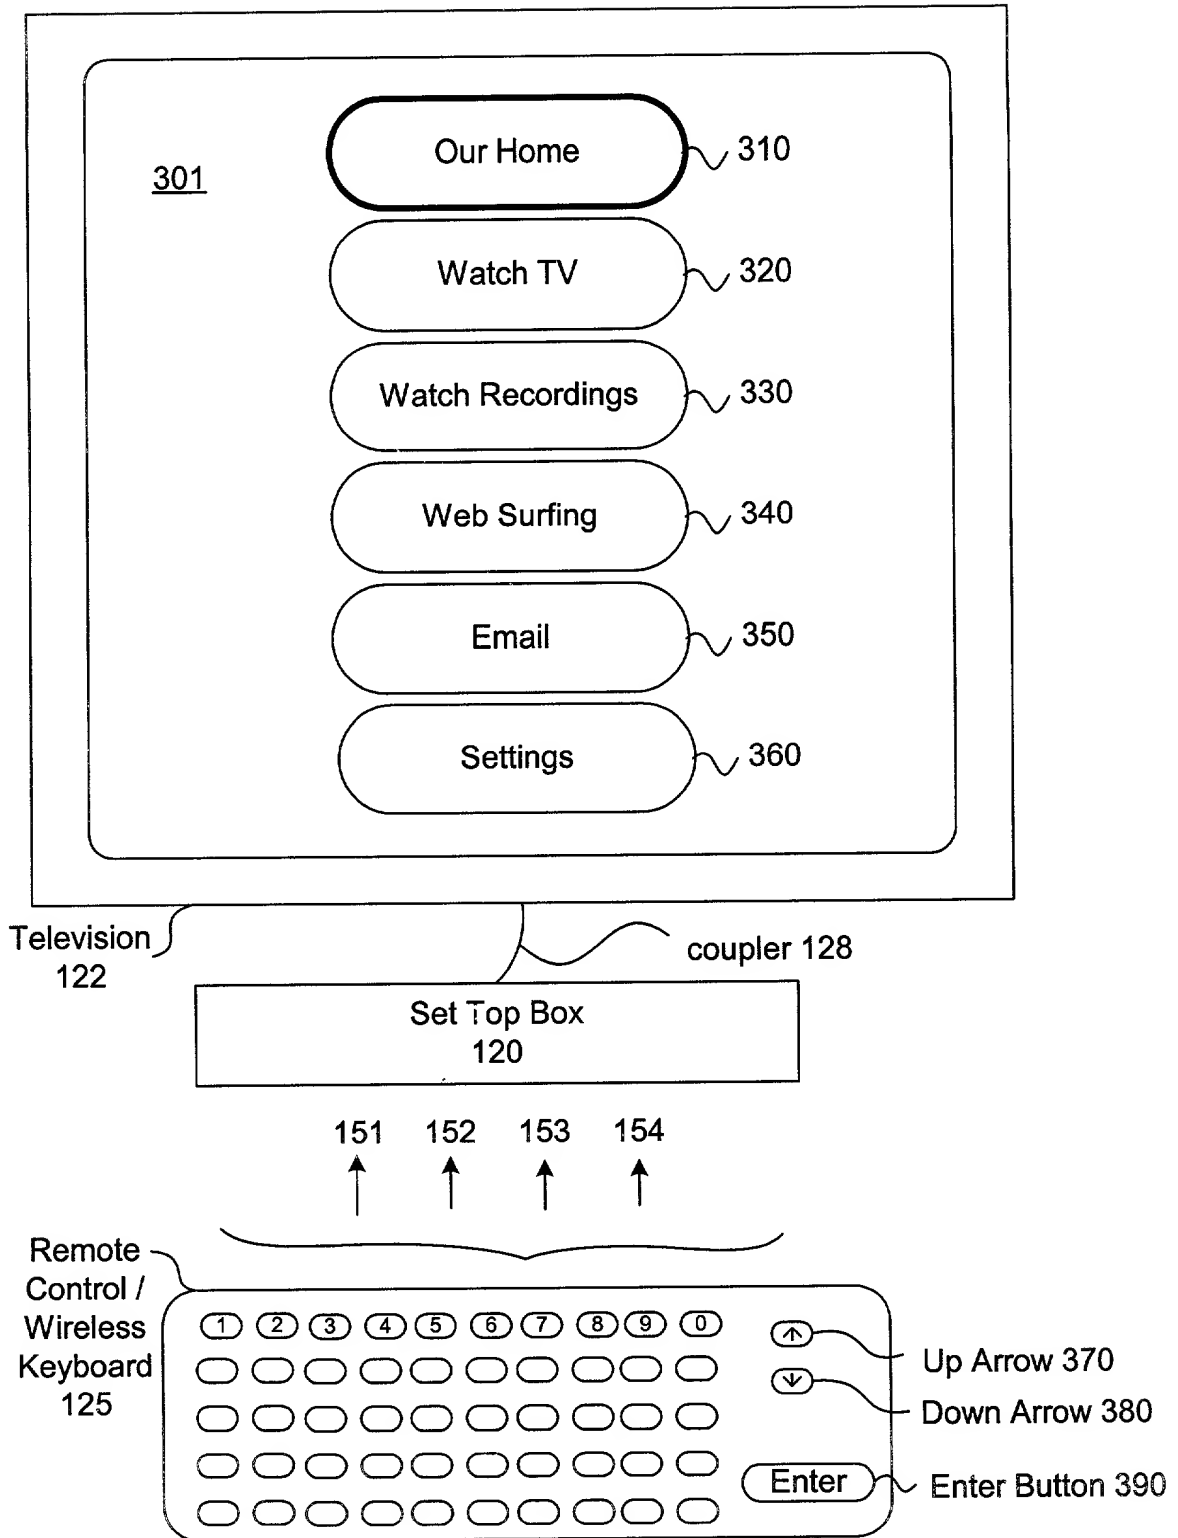 


FIG. 3

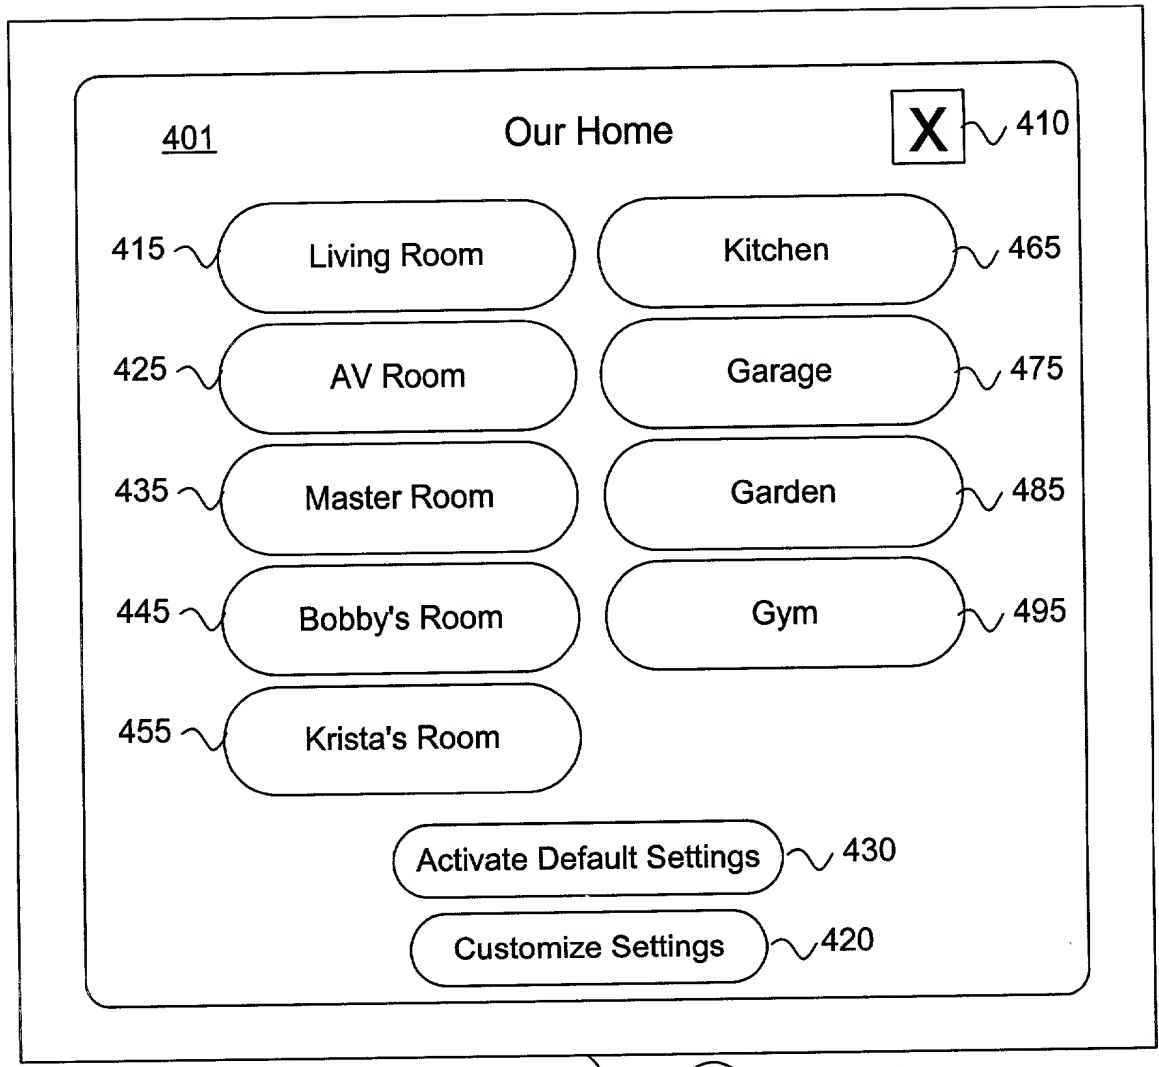 400




coupler 128

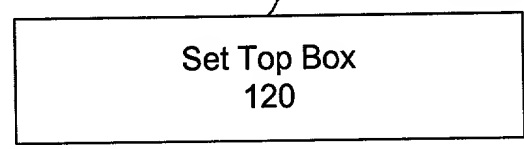 

152 153 154 155

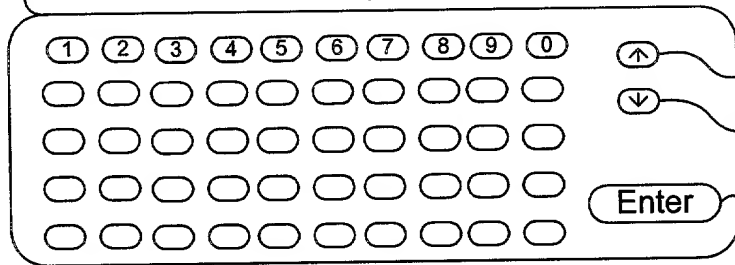 Remote
Control /
Wireless
Keyboard
125




Up Arrow 370

Down Arrow 380


Enter Button 390

FIG. 4

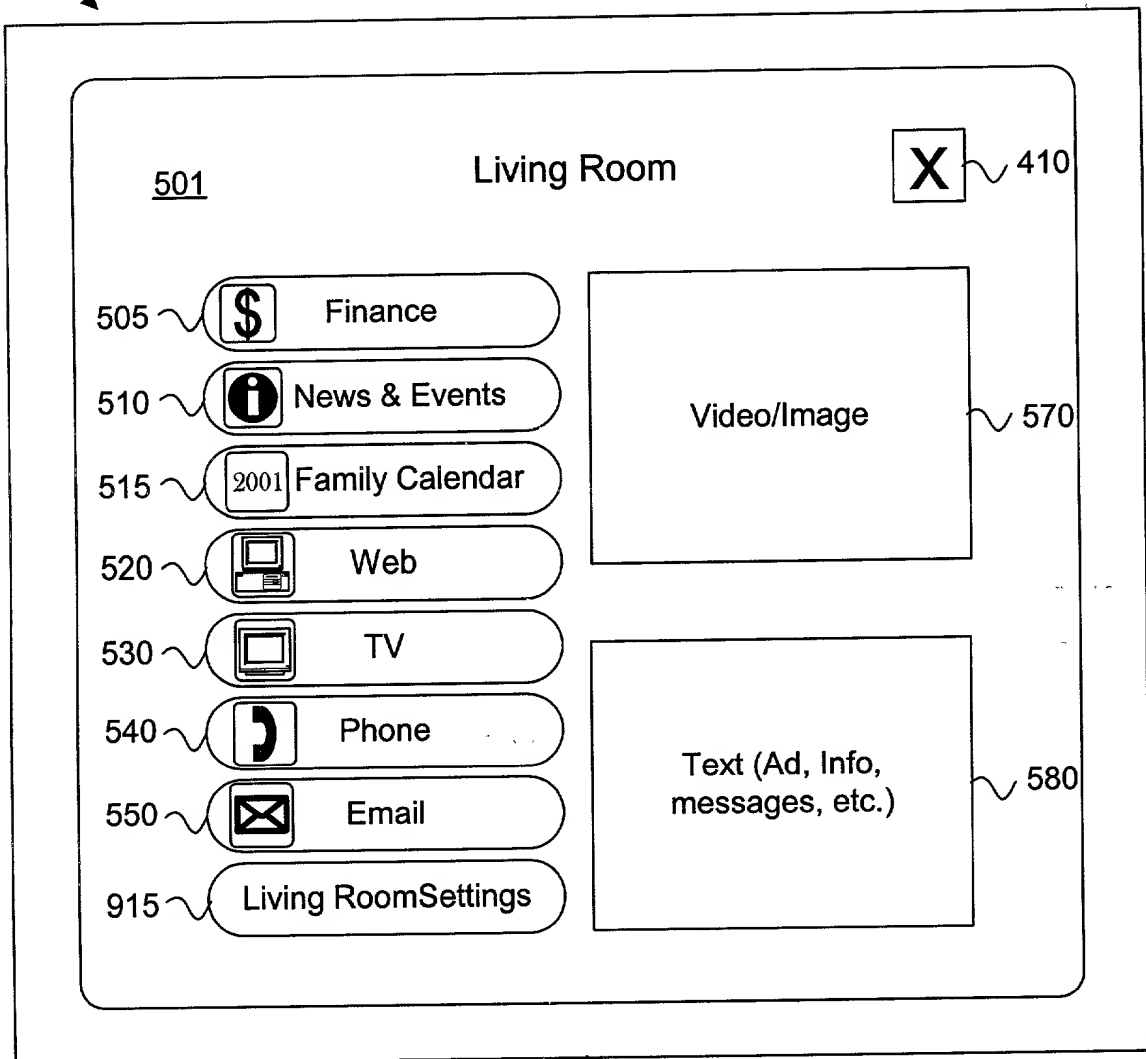 500




coupler 128

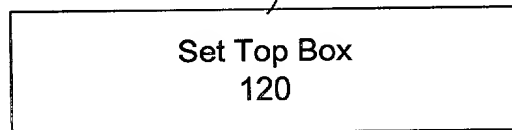 

152 153 154 155

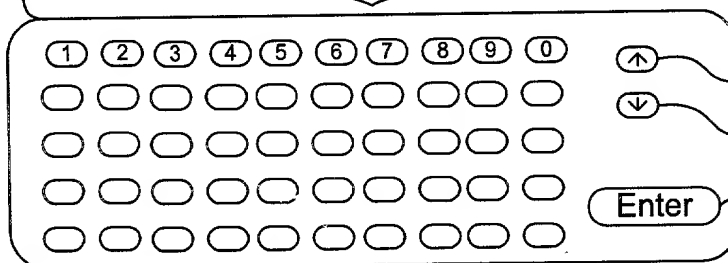 Remote Control / Wireless Keyboard 125




Up Arrow 370

Down Arrow 380


Enter Button 390

FIG. 5

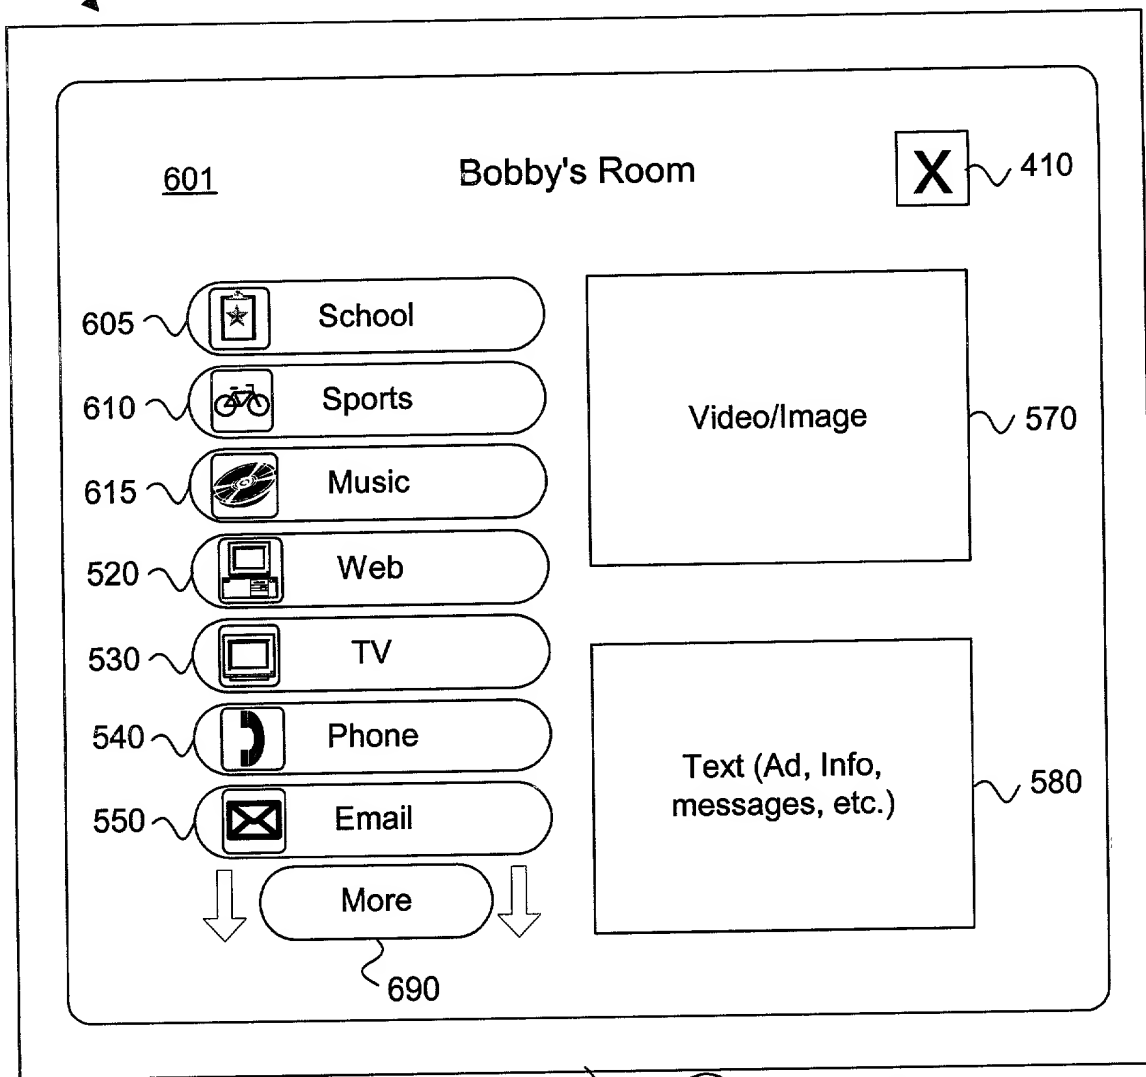 
600



coupler 128

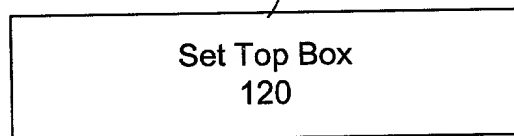 

152 153 154 155

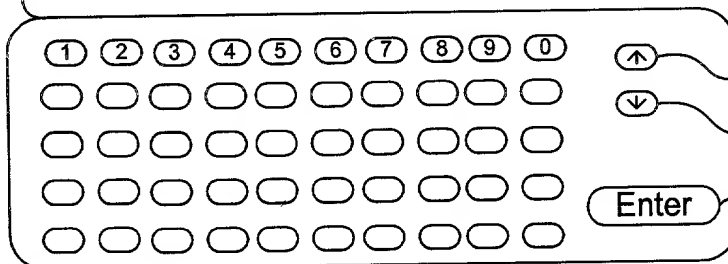 Remote
Control /
Wireless
Keyboard
125

Up Arrow 370


Down Arrow 380

Enter


Enter Button 390

FIG. 6

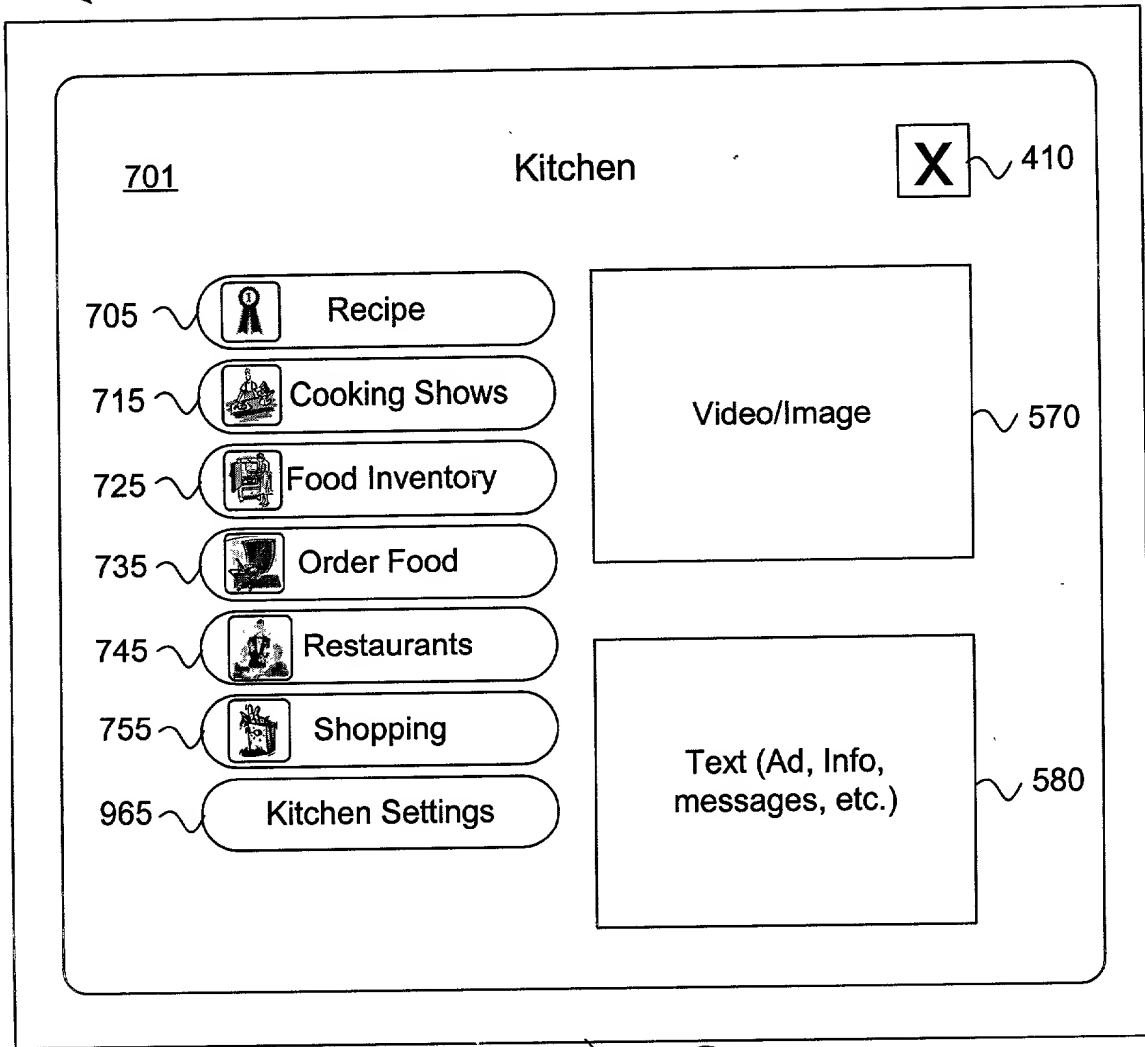 700




coupler 128

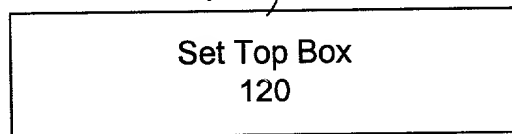 

152 153 154 155

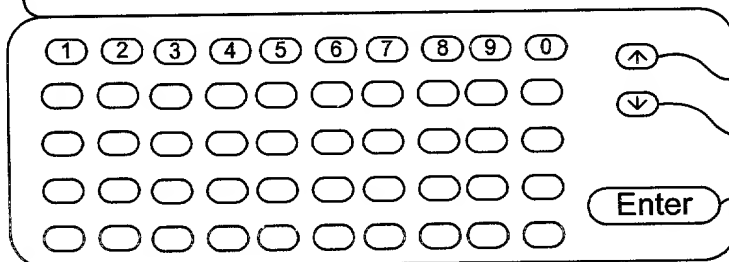 Remote Control / Wireless Keyboard 125



Up Arrow 370

Down Arrow 380

Enter Button 390

FIG. 7

800

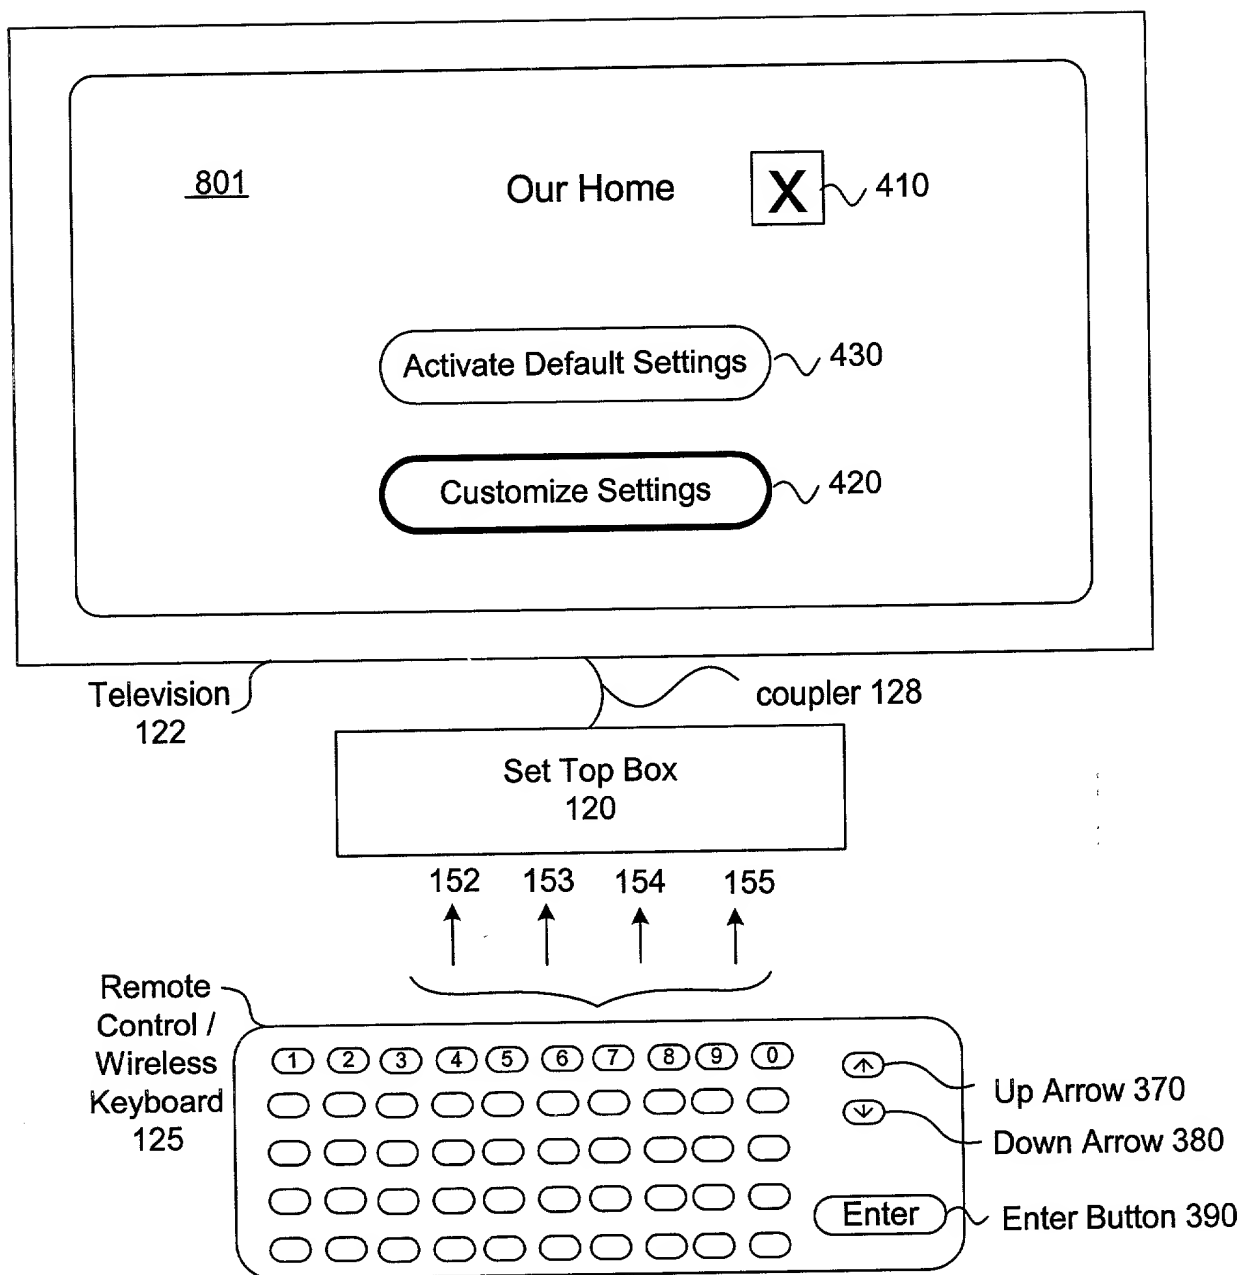 


FIG. 8


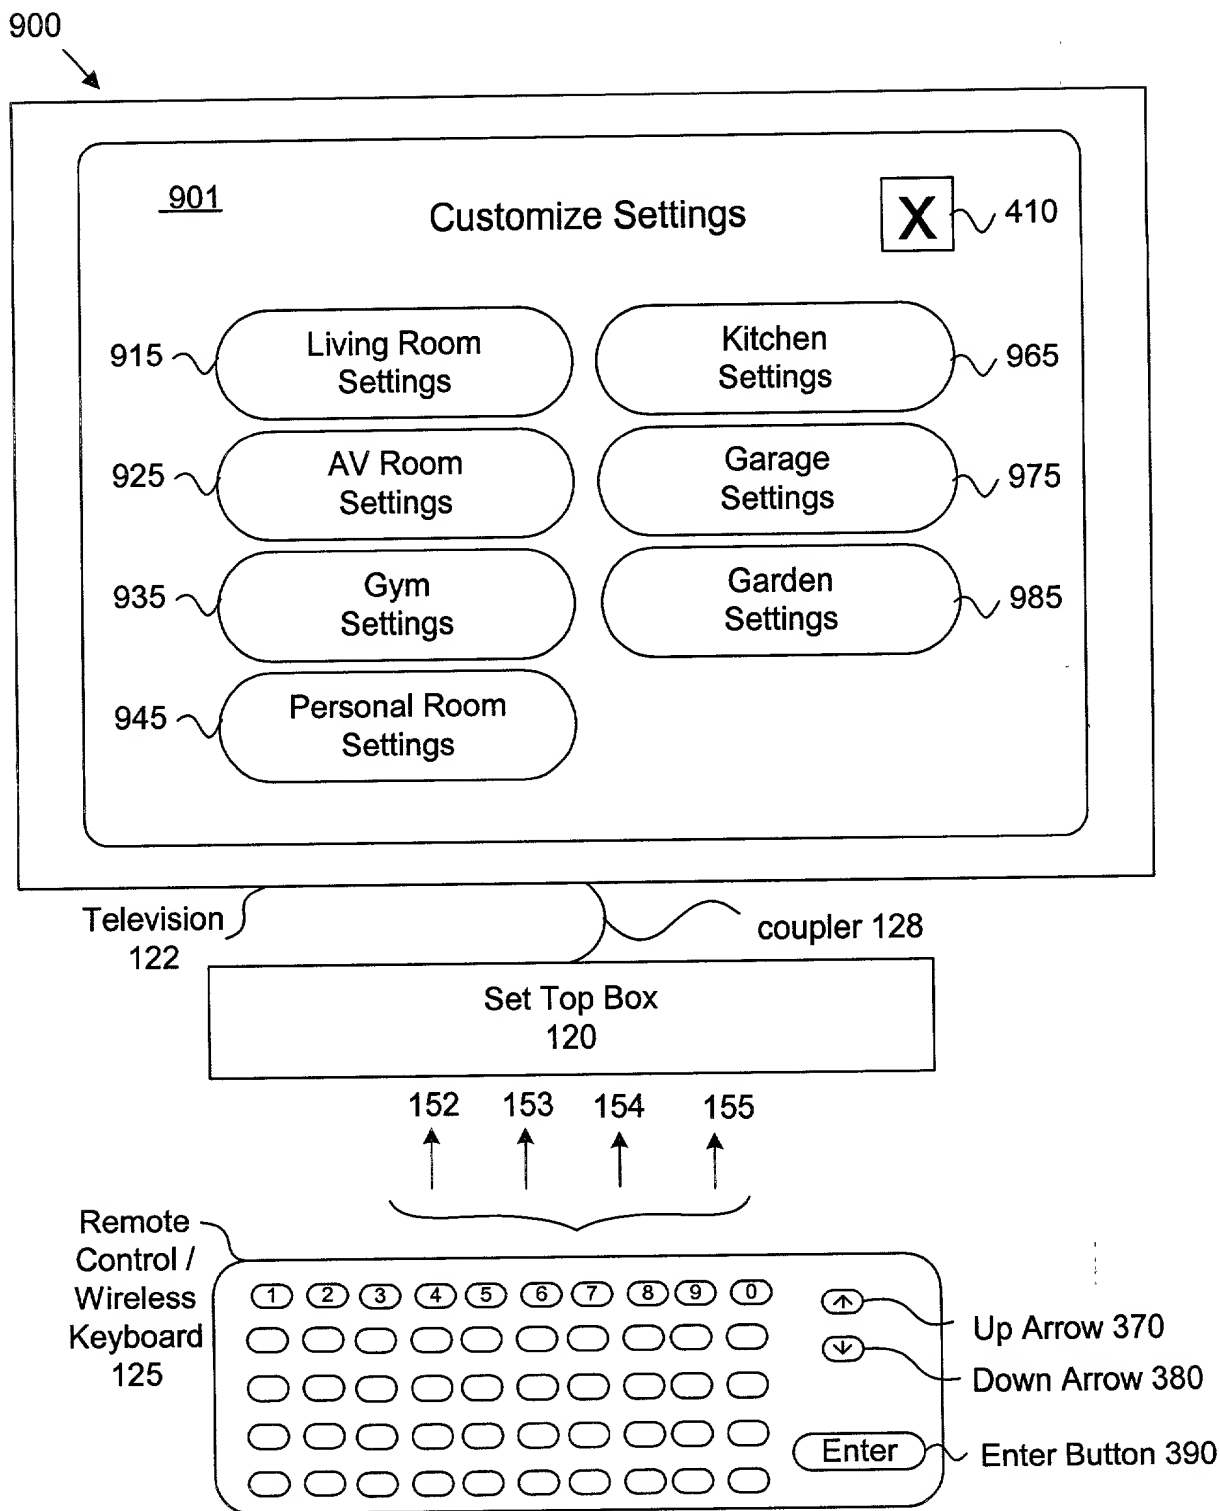 



FIG. 9

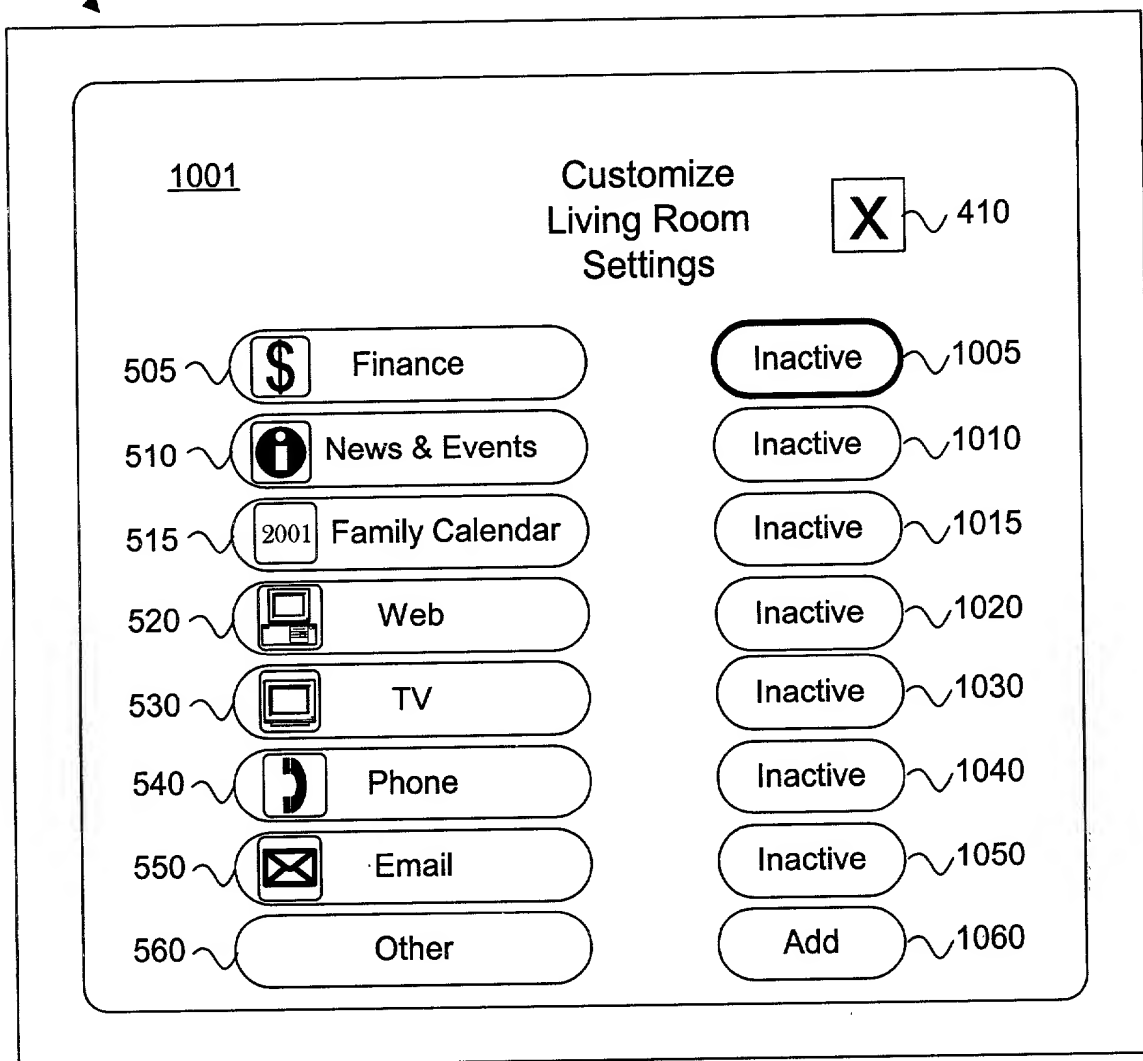 1000



Television
122

 coupler 128



152 153 154 155

Remote
Control /
Wireless
Keyboard
125

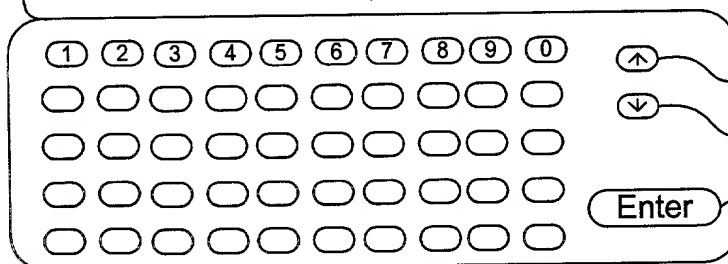 


FIG. 10

1100

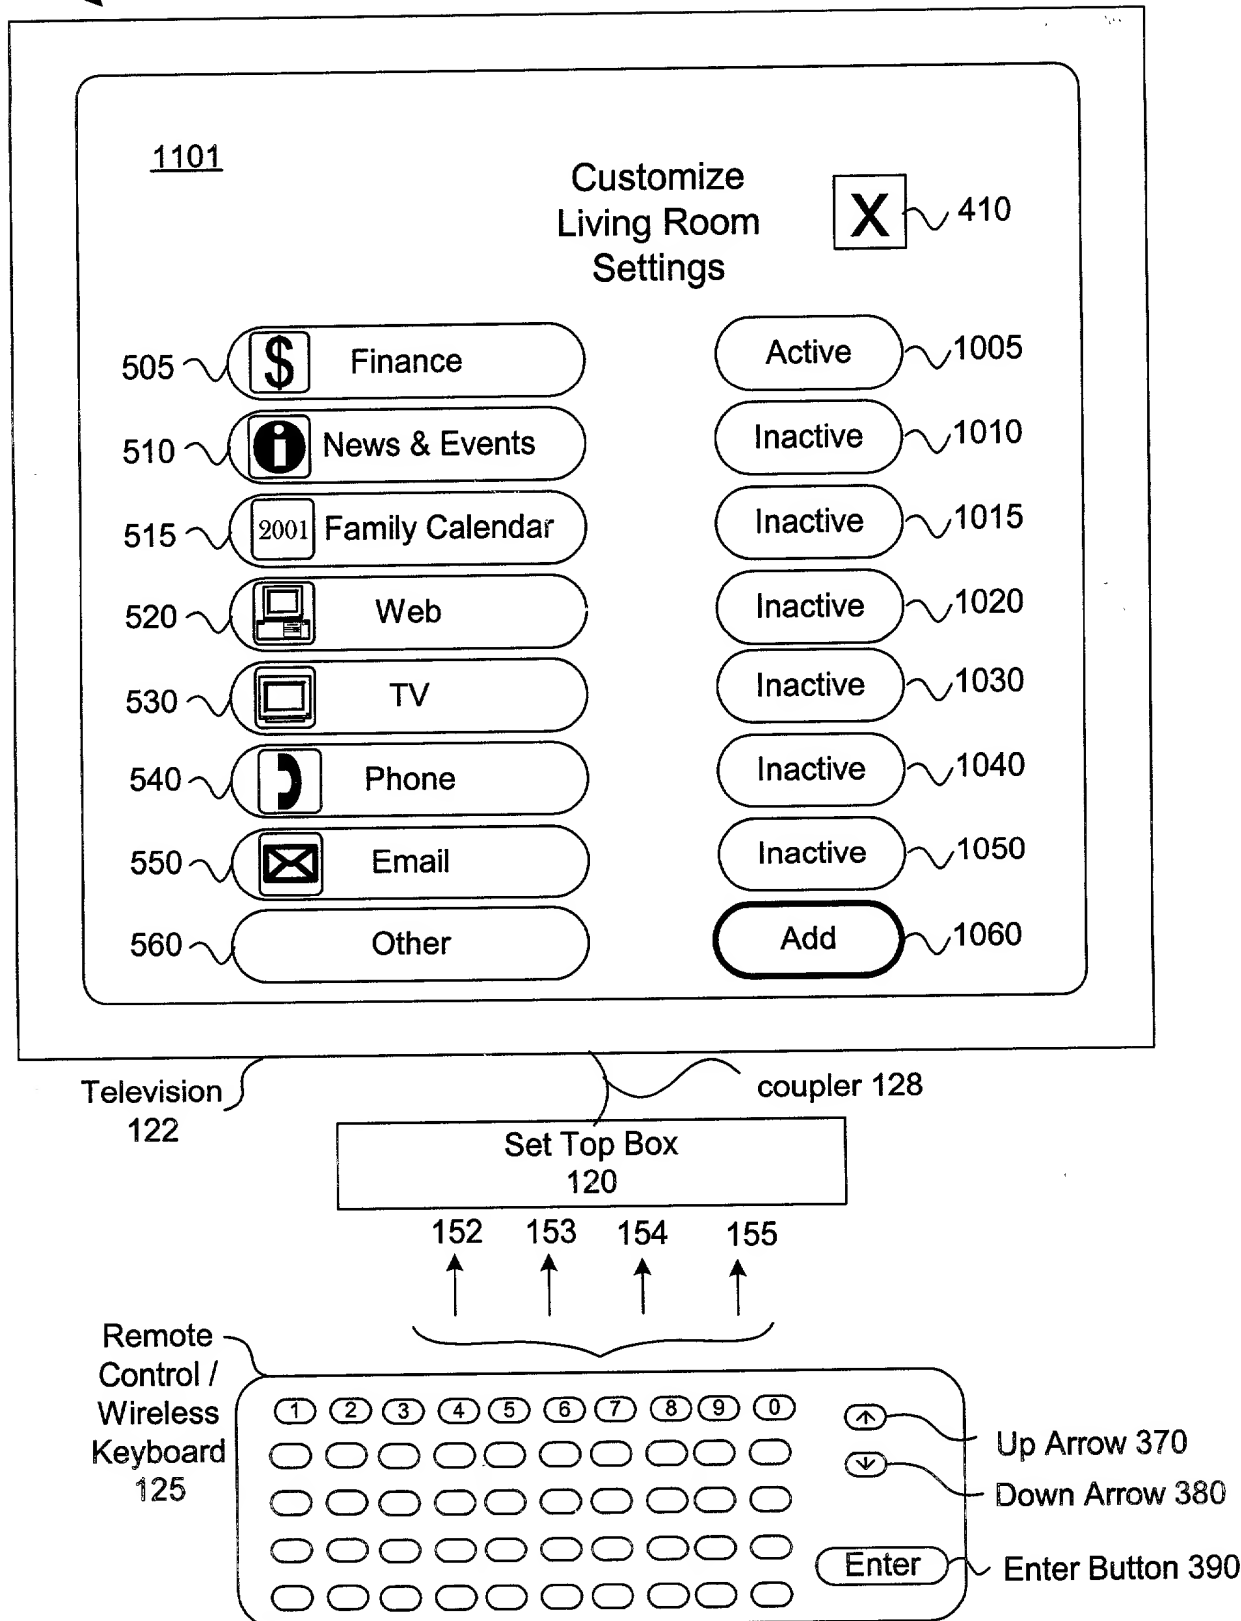 


FIG. 11

1200


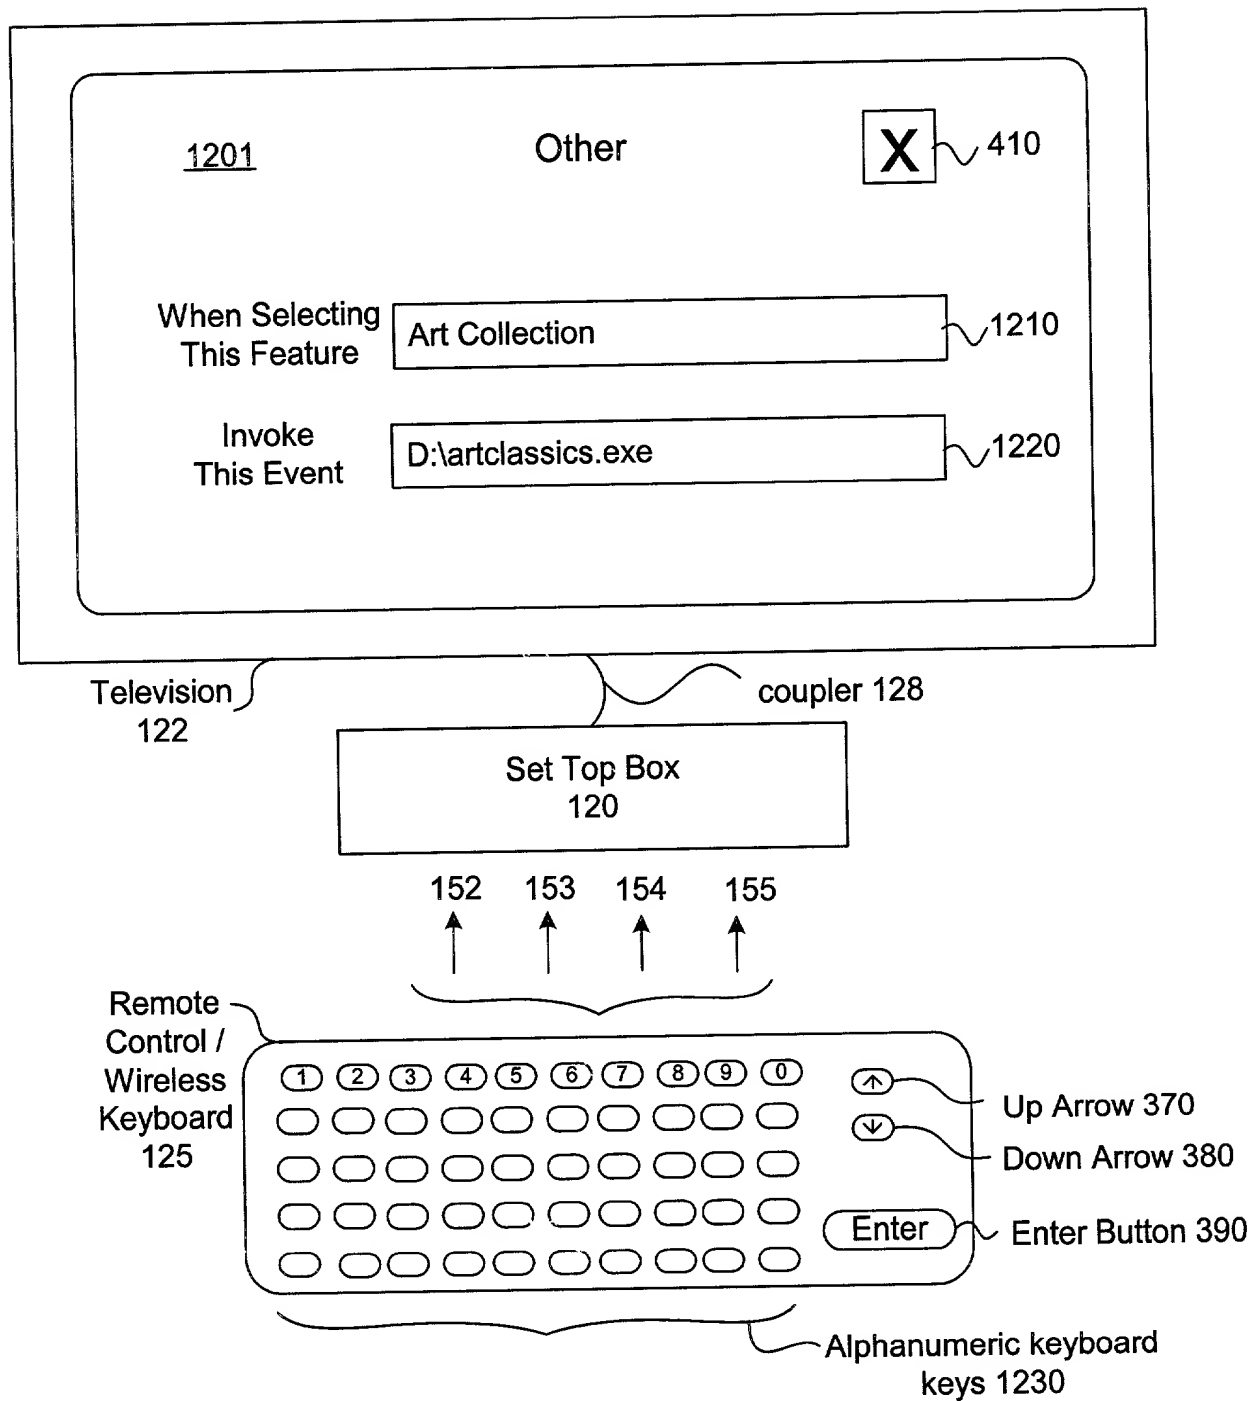 



FIG. 12

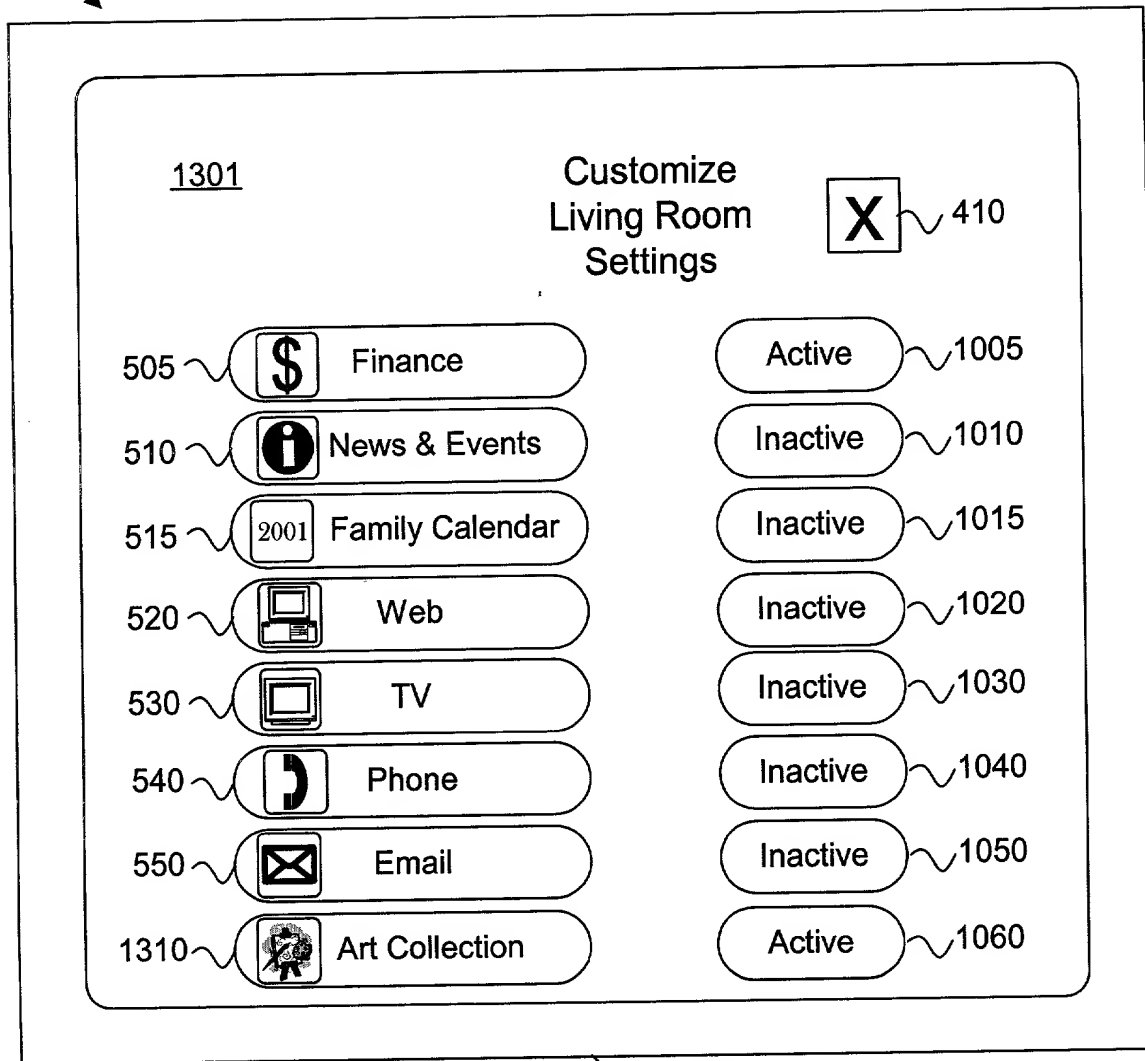 1300



Television
122

 coupler 128



152 153 154 155

Remote
Control /
Wireless
Keyboard
125


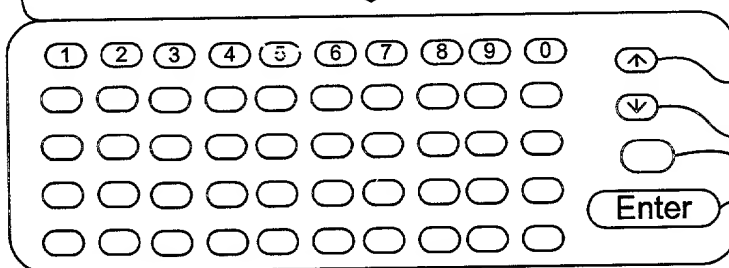 



FIG. 13

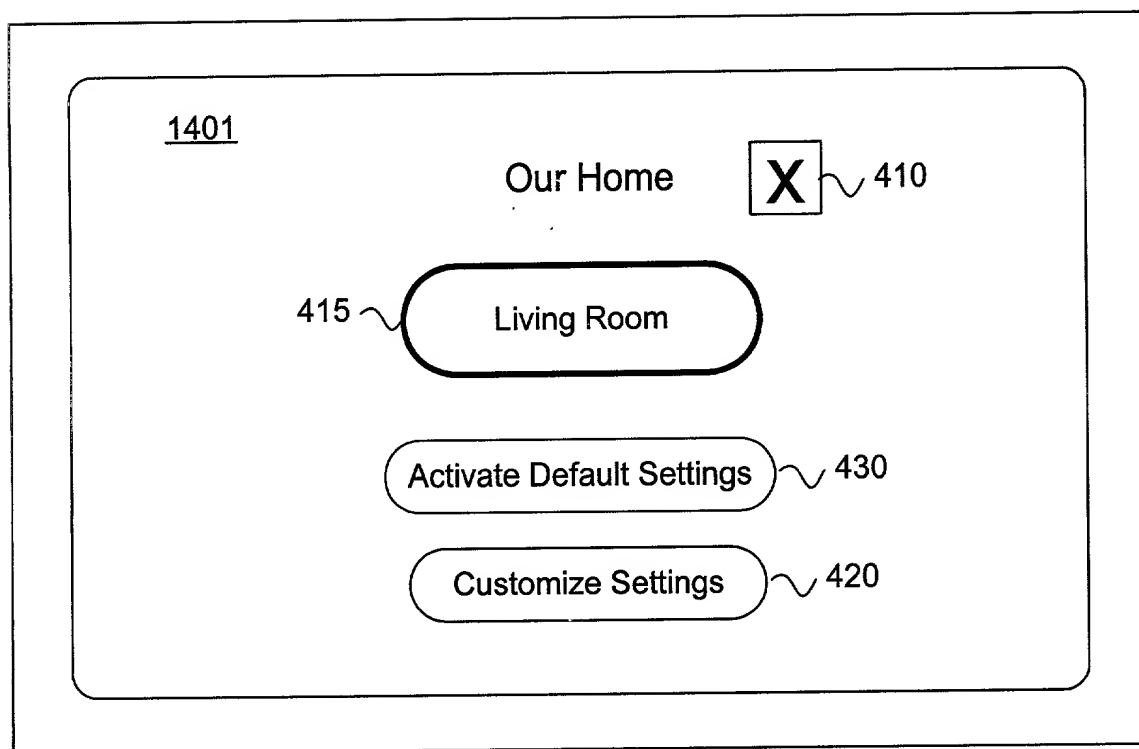 1400



Television
122

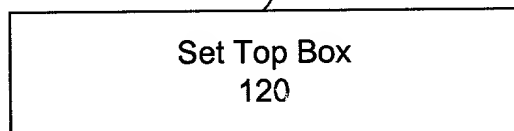 coupler 128



152 153 154 155

Remote
Control /
Wireless
Keyboard
125

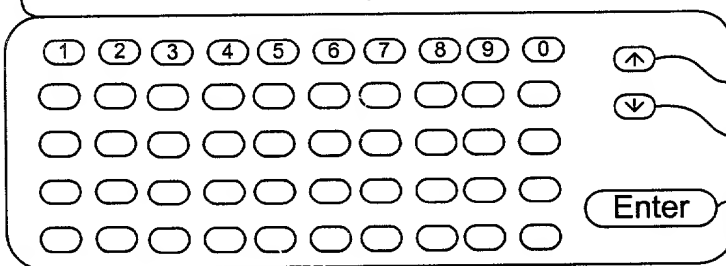 


FIG. 14

1500

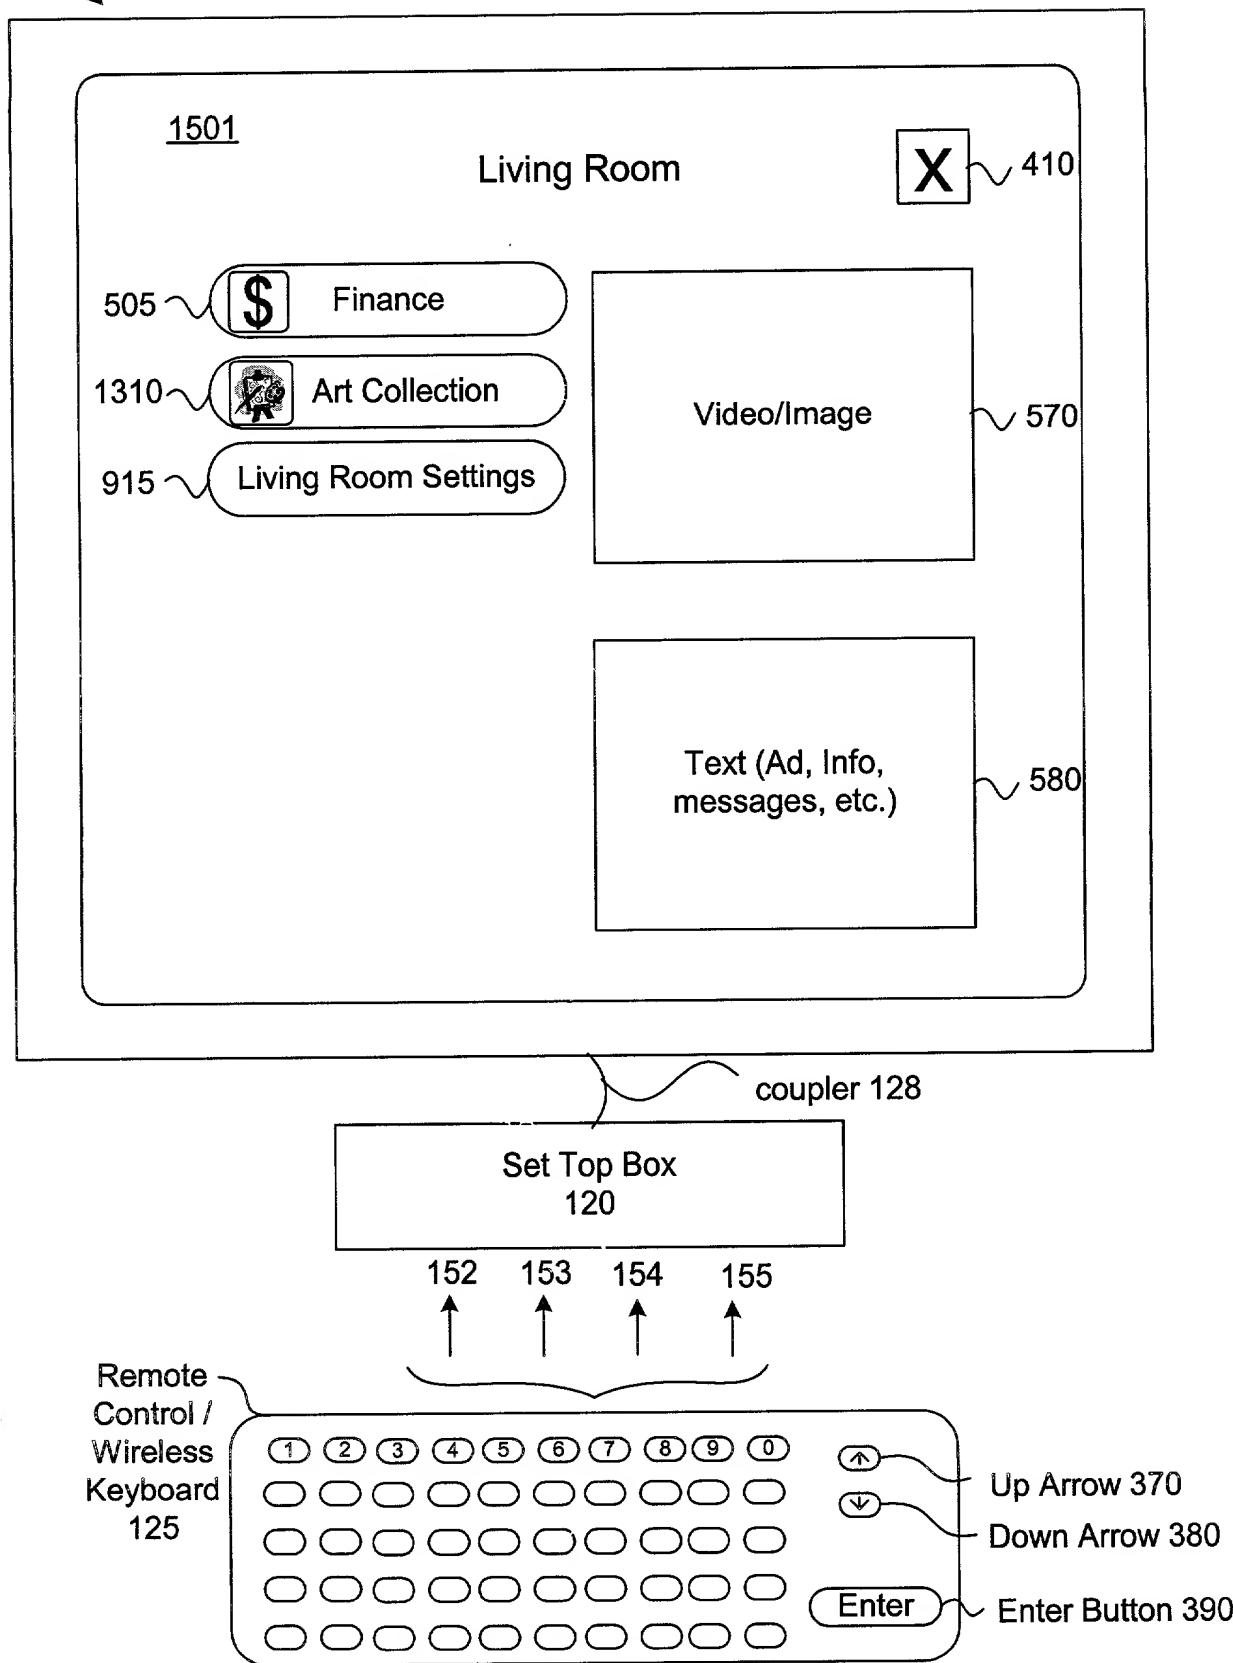 


FIG. 15

1600


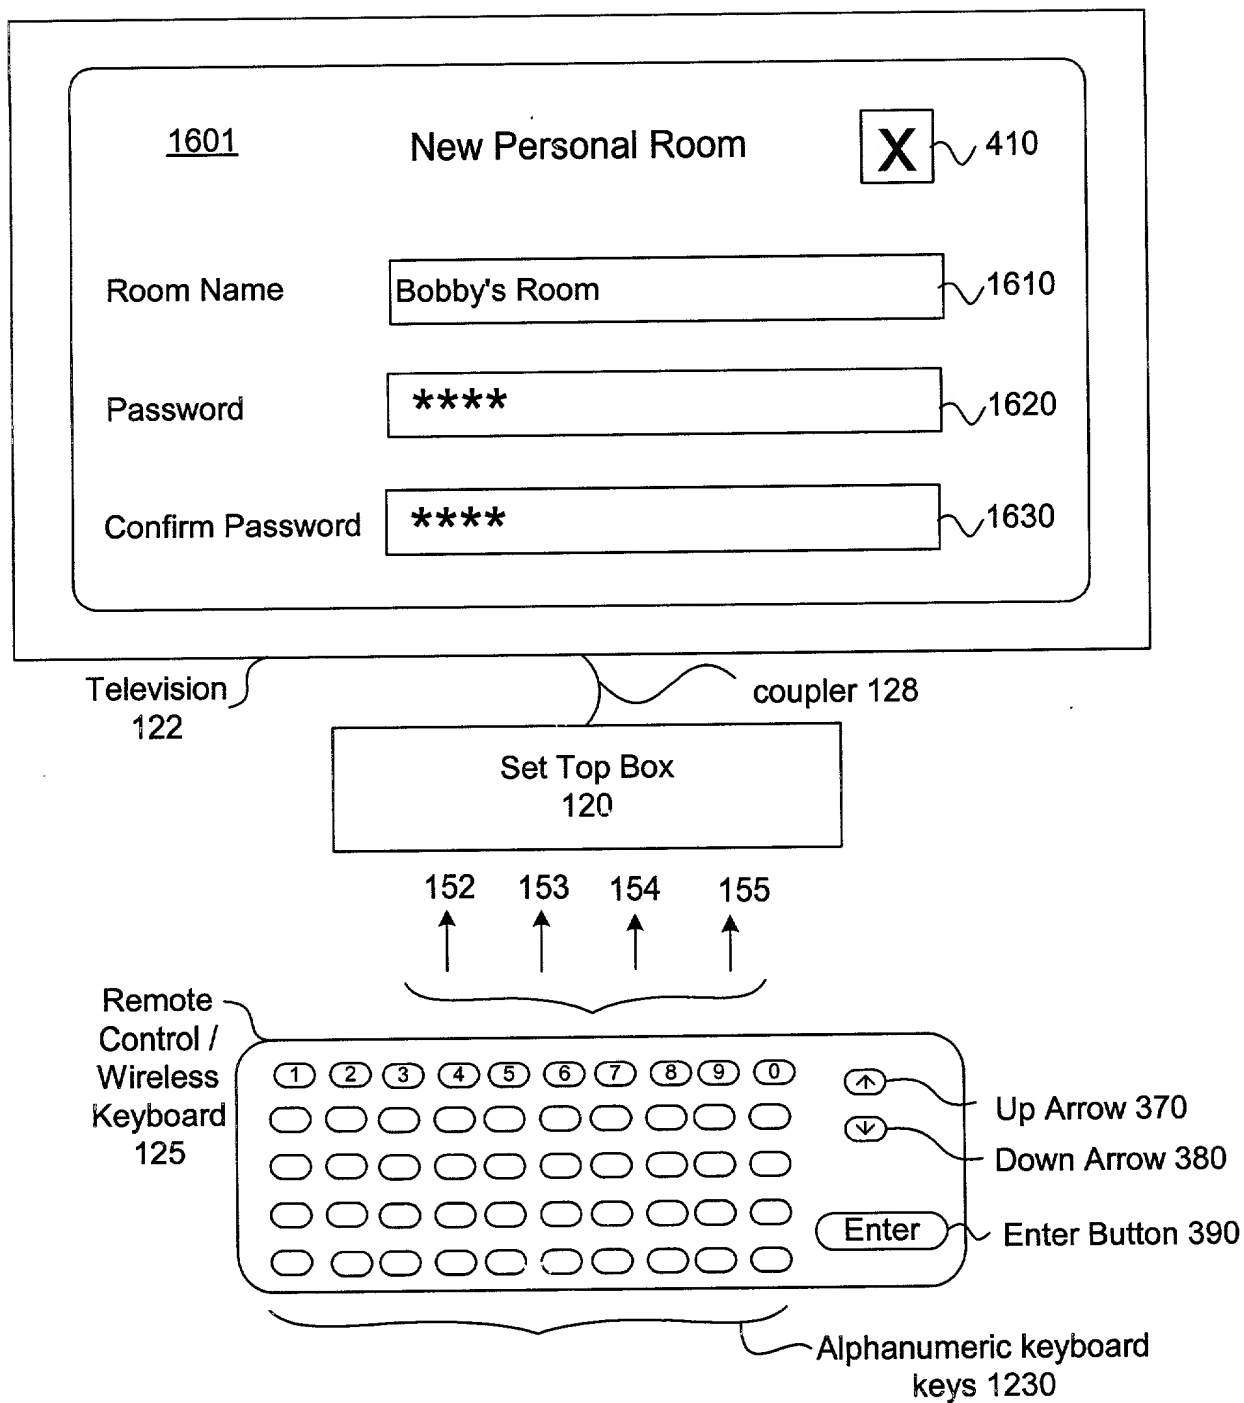 


FIG. 16

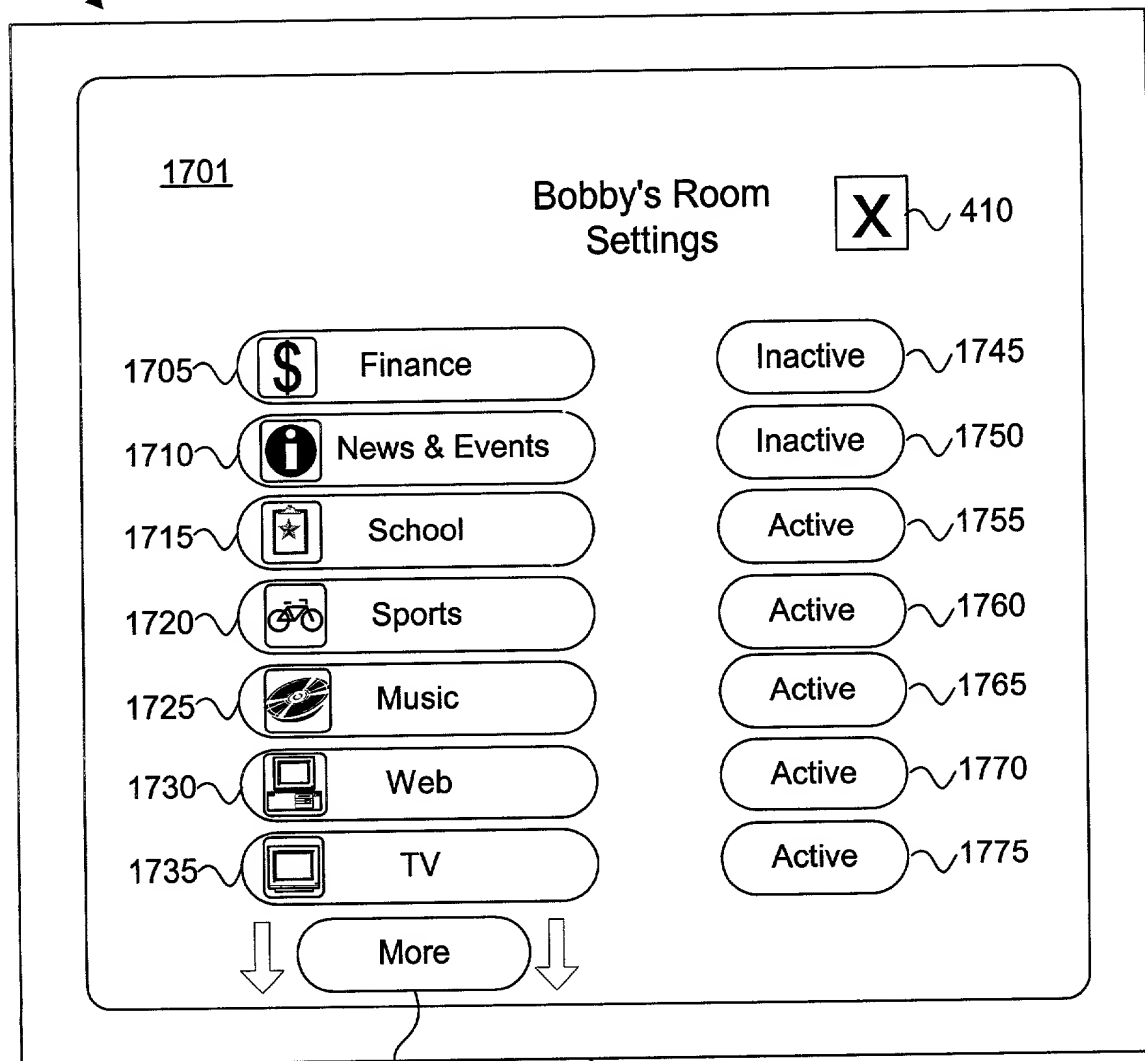 1700




Television
122

Set Top Box
120

coupler 128

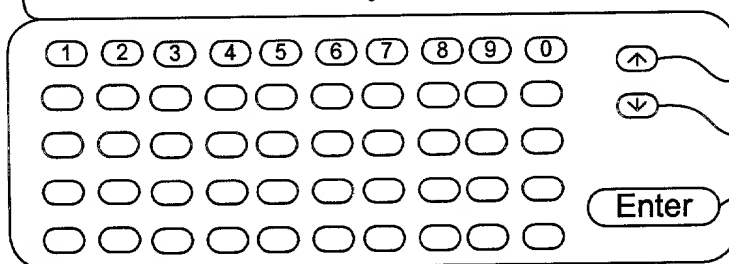 Remote
Control /
Wireless
Keyboard
125




Up Arrow 370

Down Arrow 380

Enter Button 390


FIG. 17

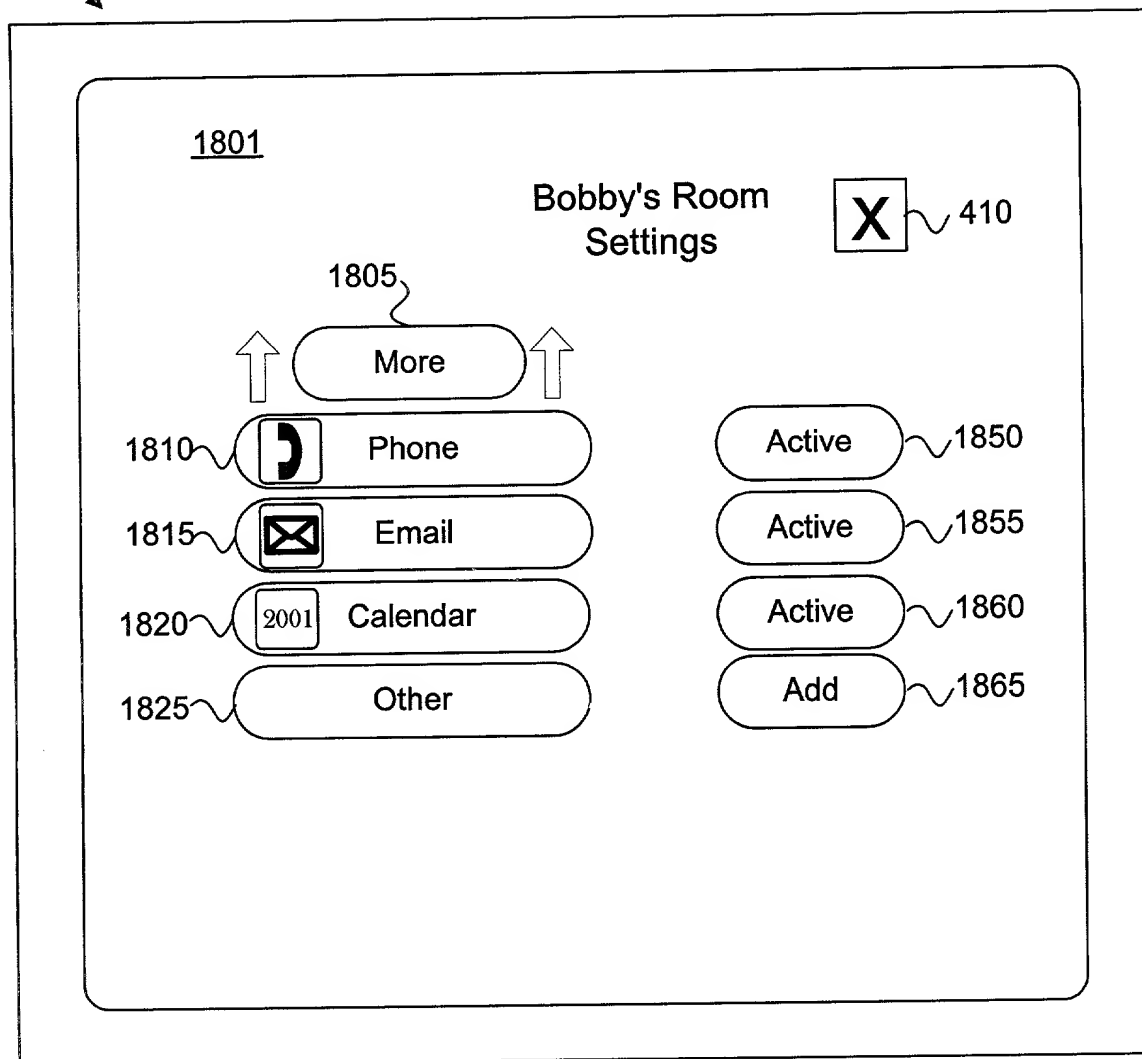 1800




Television
122

 coupler 128



152 153 154 155

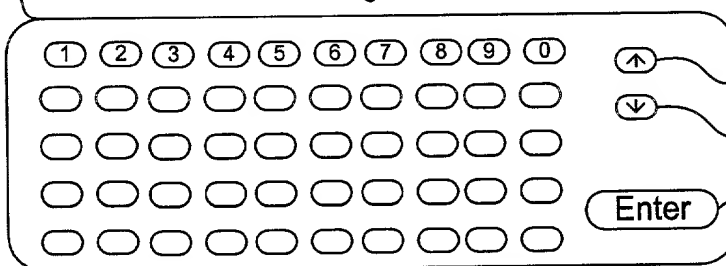 Remote
Control /
Wireless
Keyboard
125




Up Arrow 370

Down Arrow 380


Enter Button 390

FIG. 18

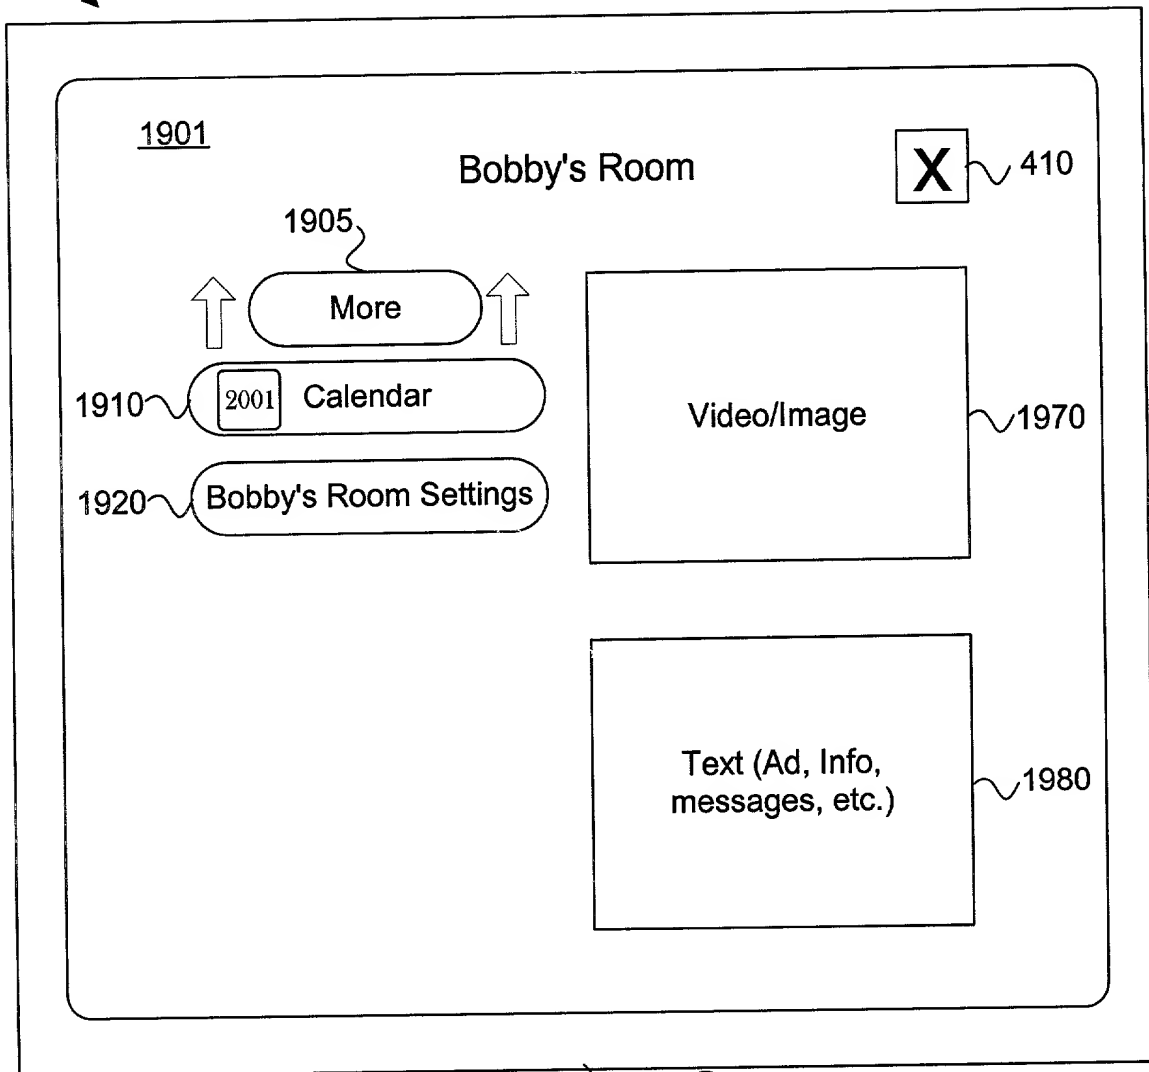 1900




coupler 128

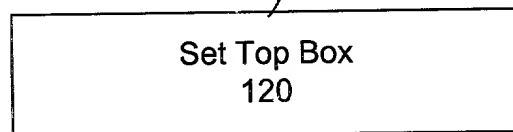 

152 153 154 155

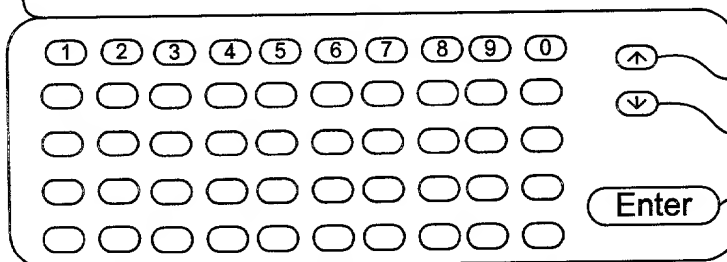 Remote Control / Wireless Keyboard 125



Up Arrow 370

Down Arrow 380

Enter

Enter Button 390

FIG. 19

2000

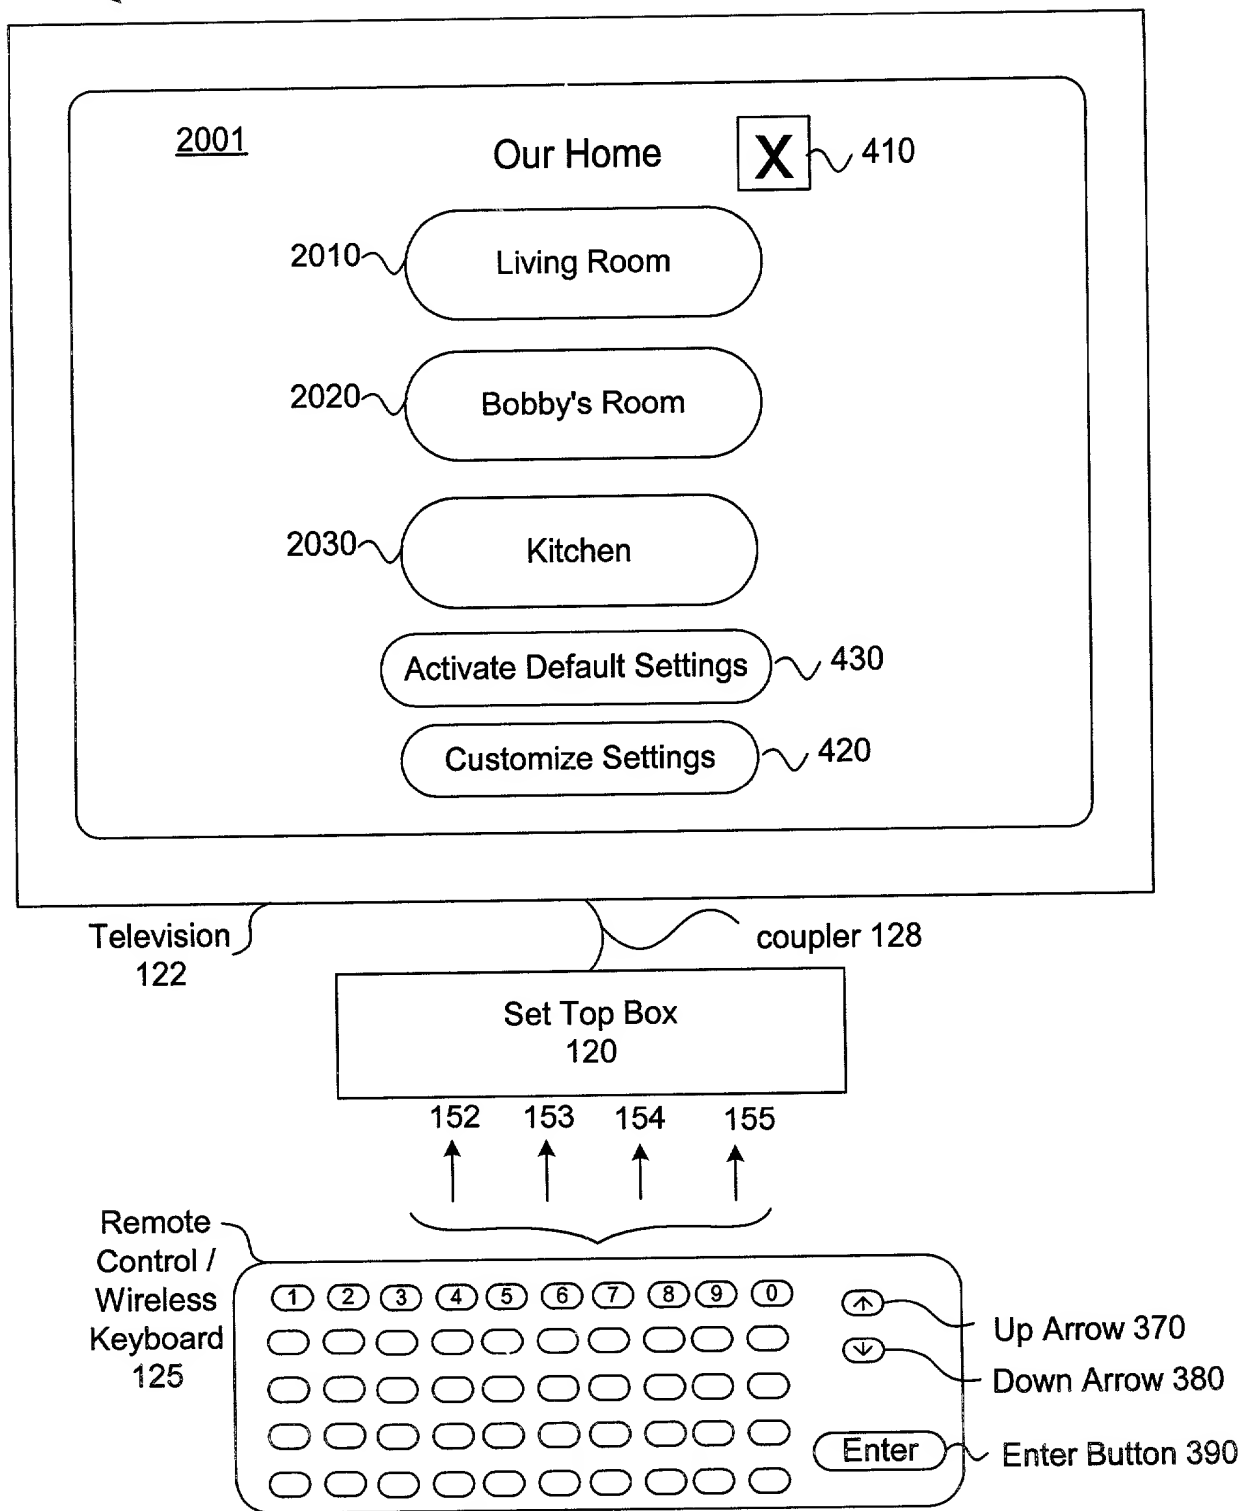 


FIG. 20


[illegible]

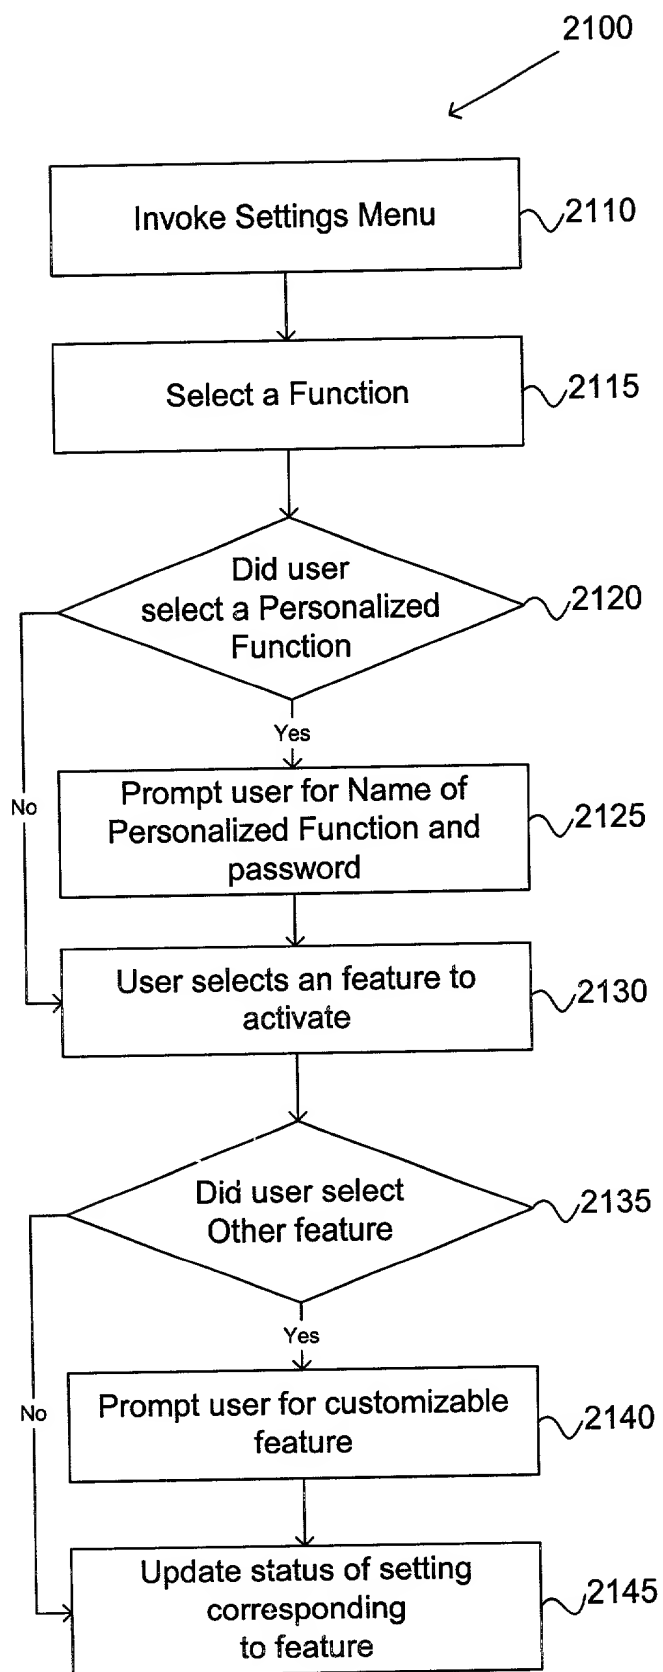 FIG. 21

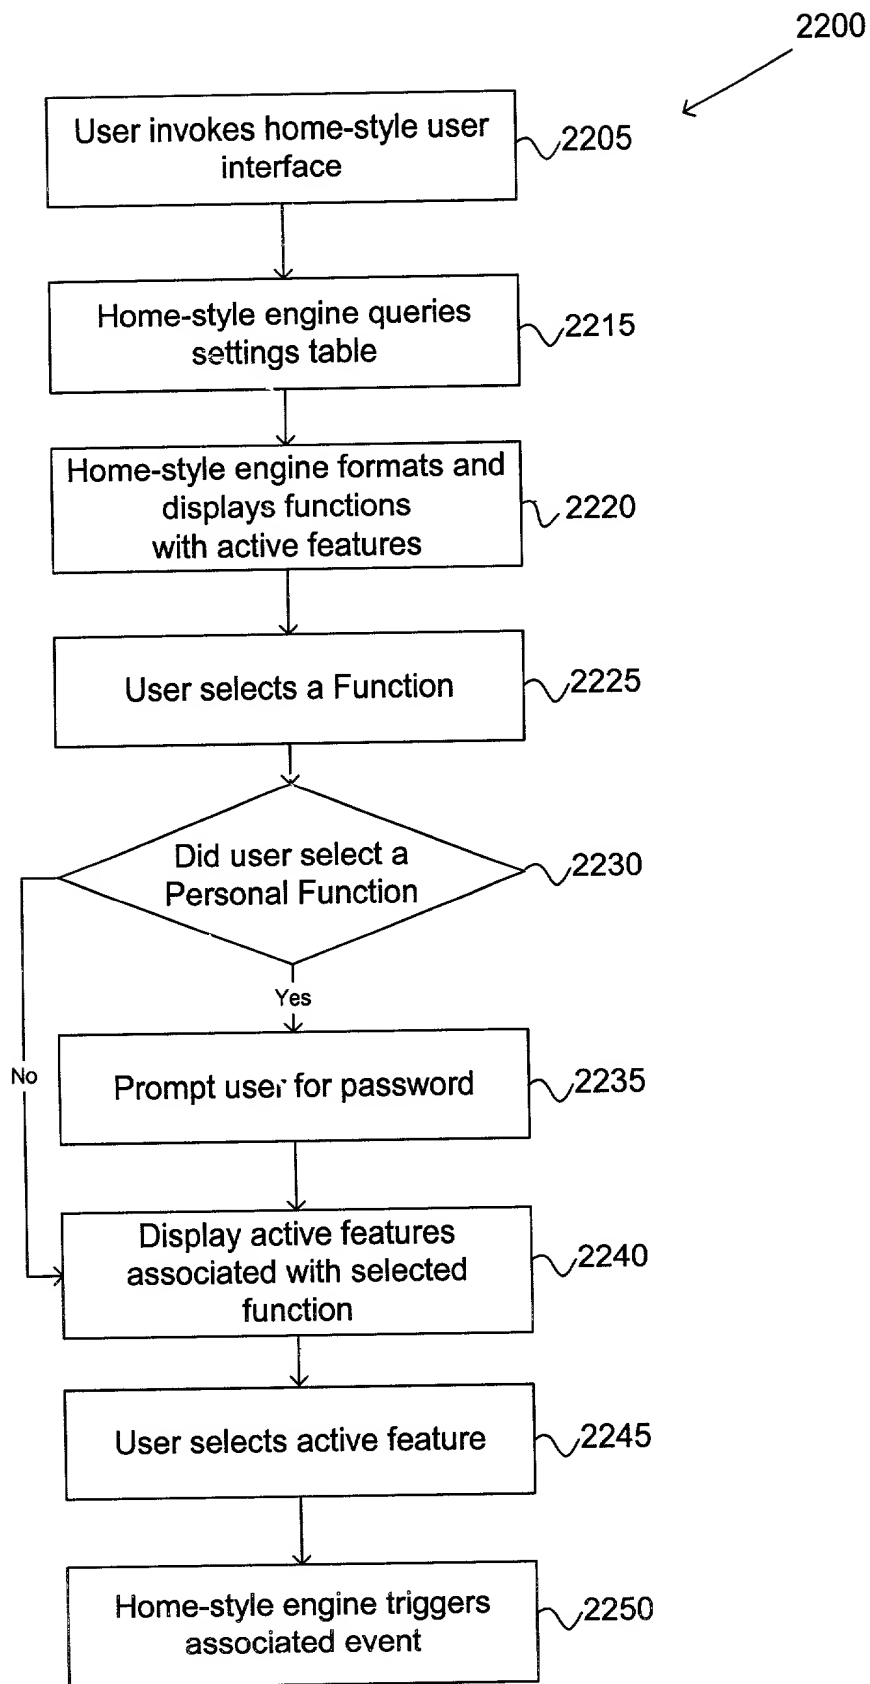 


FIG. 22

FIG. 23

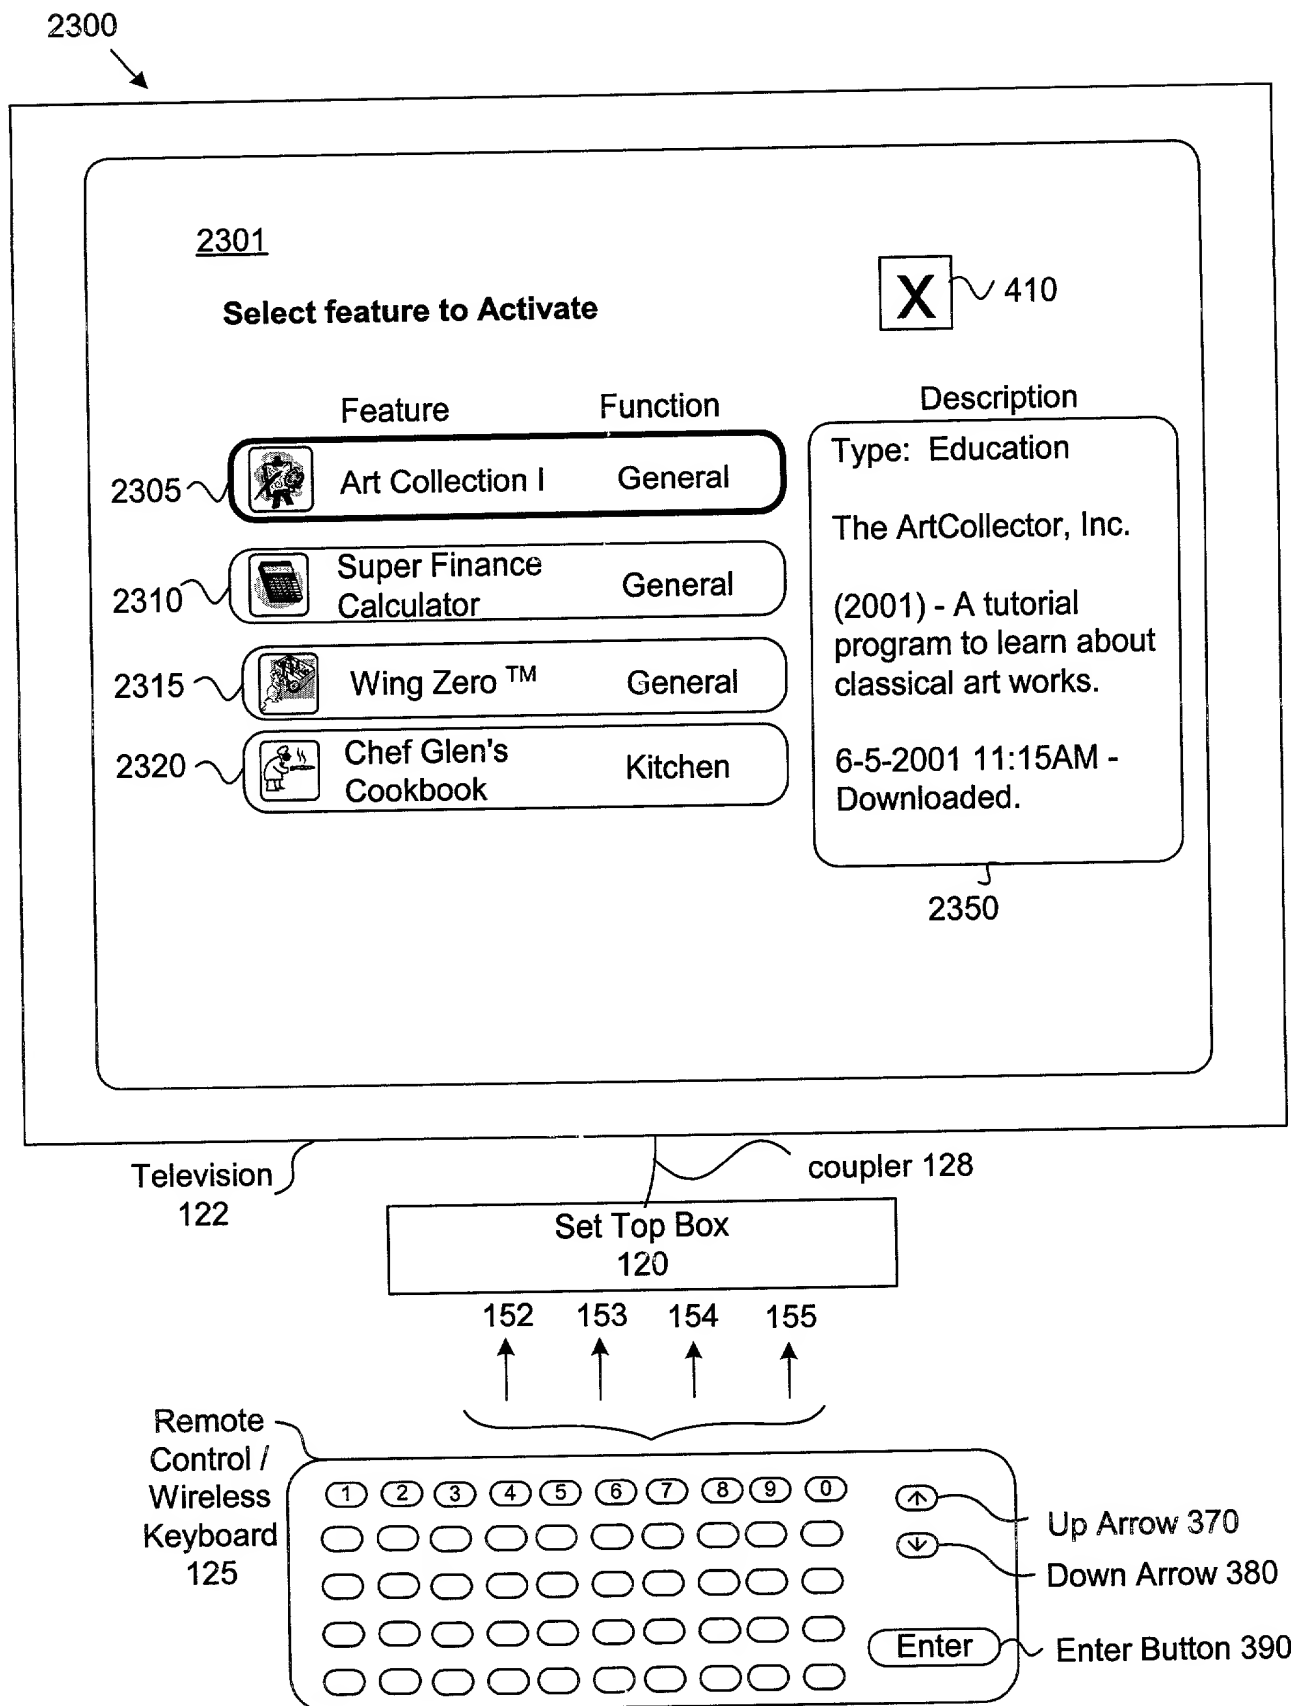 


FIG. 23

2400

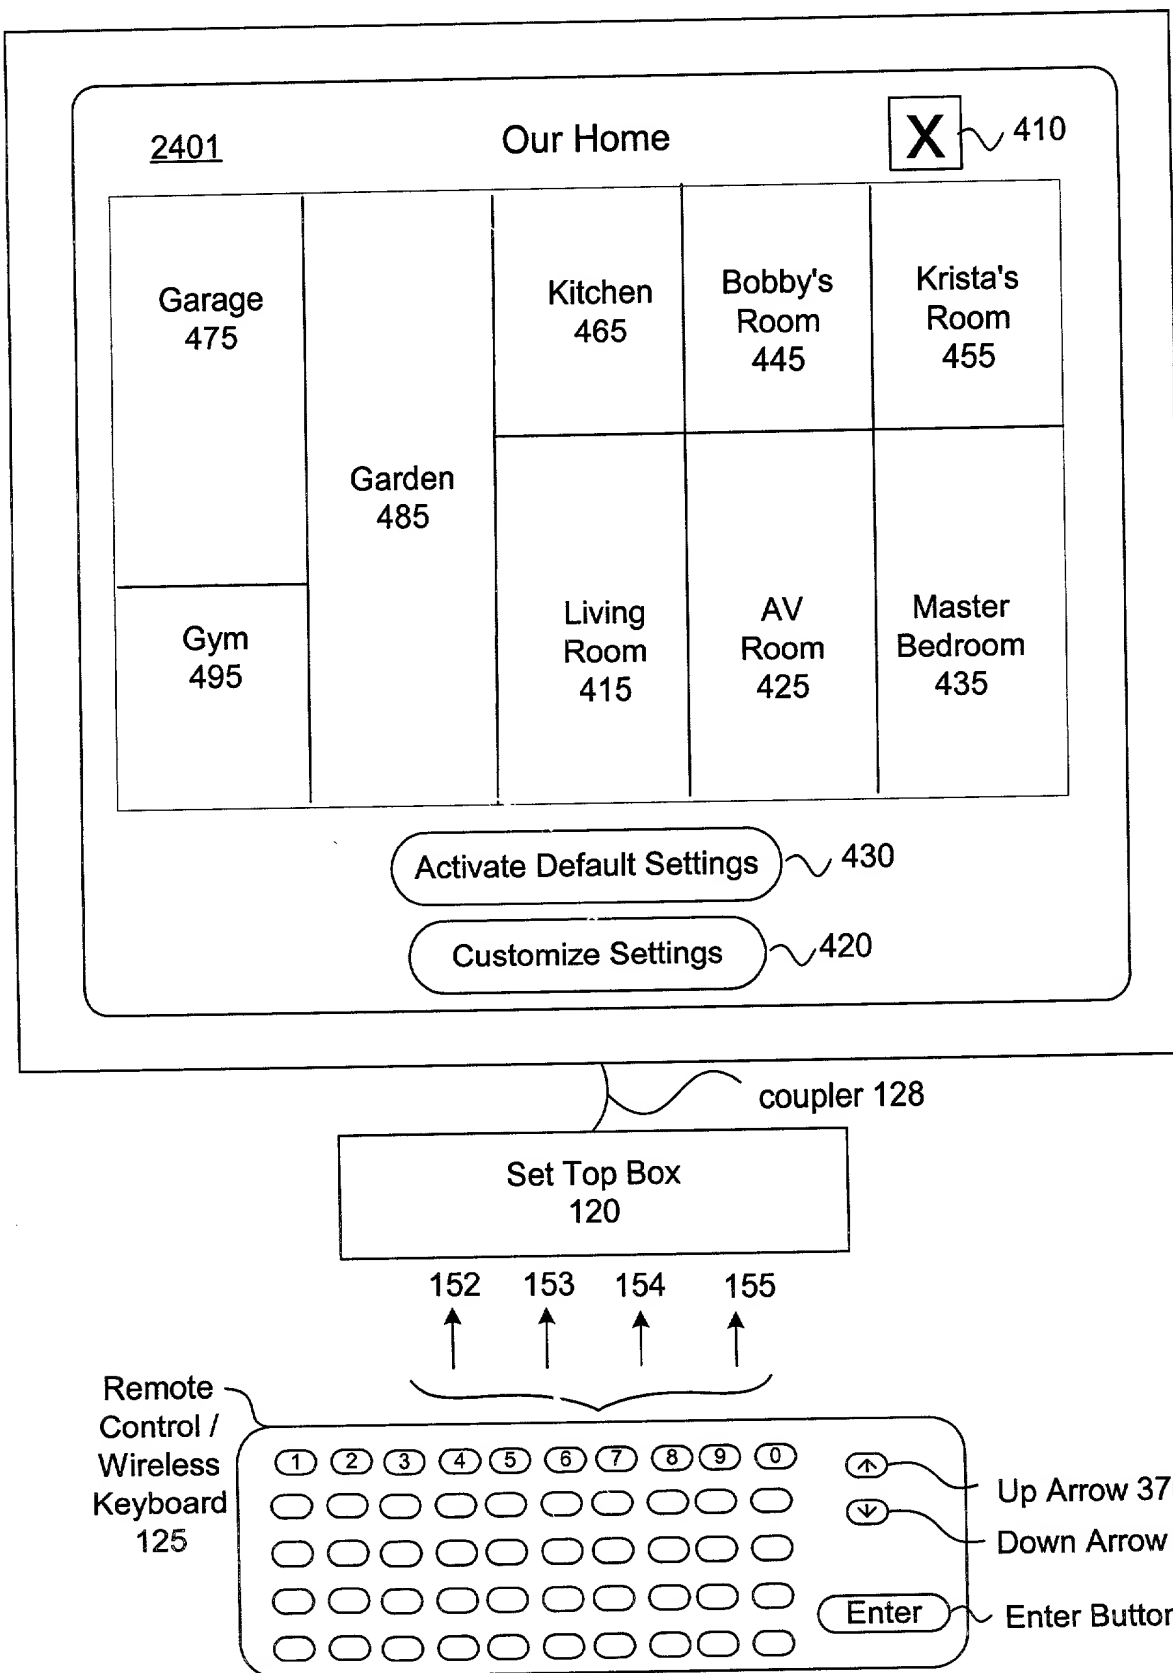 


FIG. 24



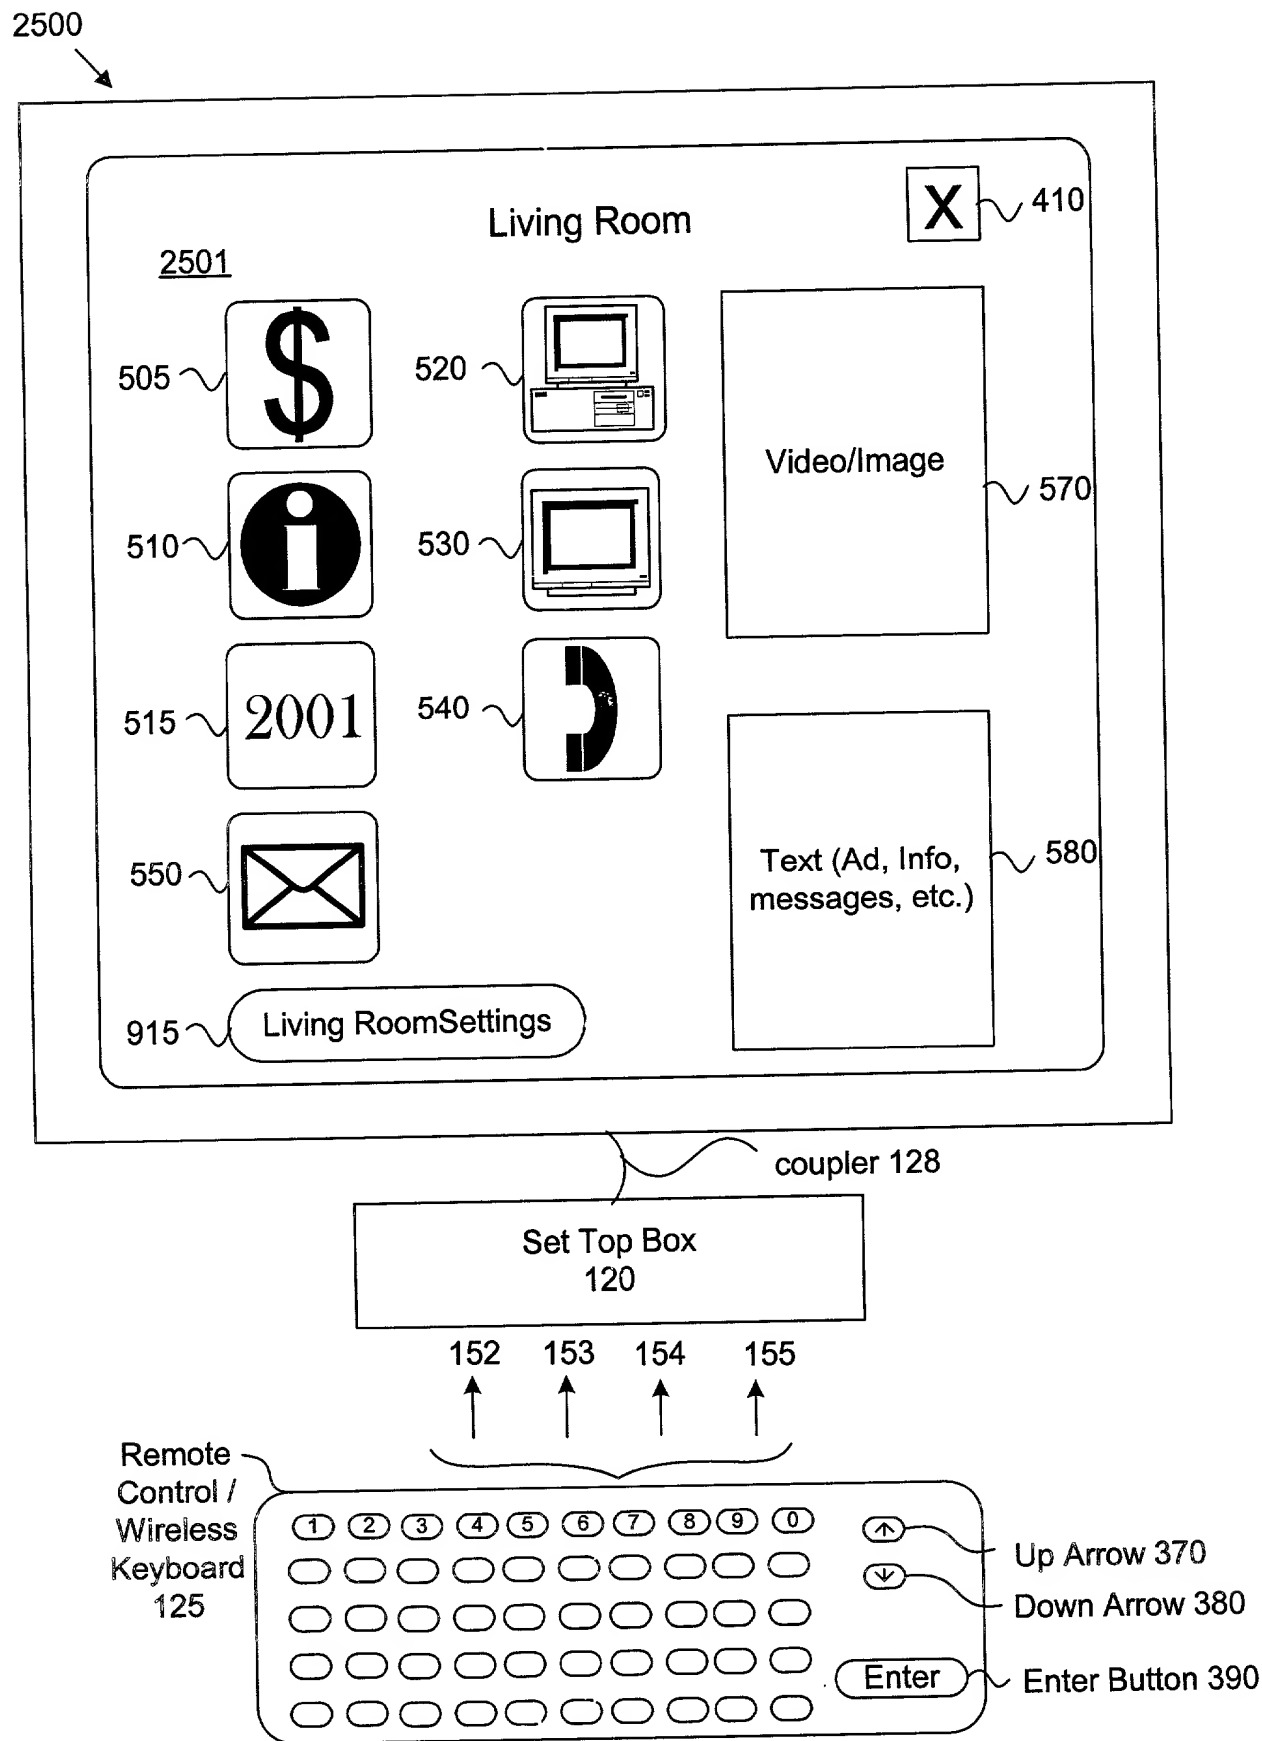 


FIG. 25

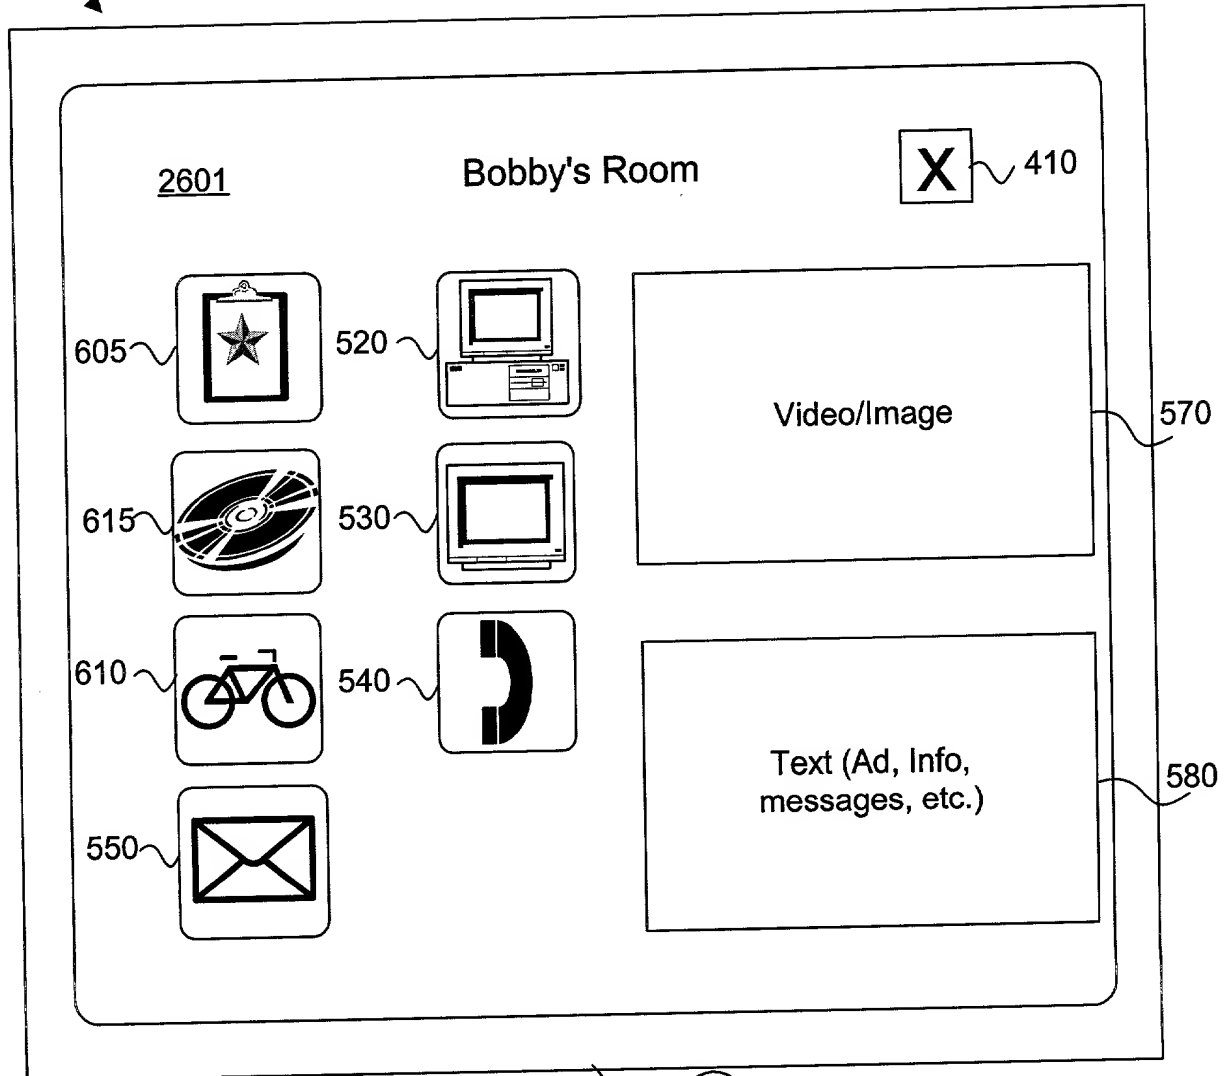 2600




coupler 128

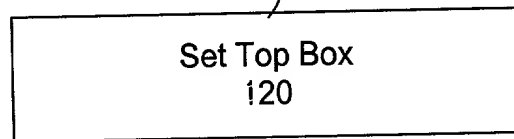 

152 153 154 155

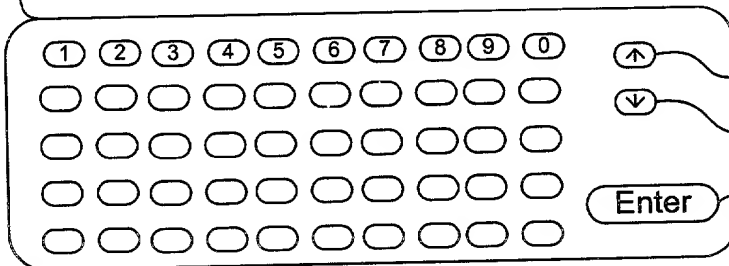 Remote
Control /
Wireless
Keyboard
125



Up Arrow 370

Down Arrow 380

Enter Button 390

FIG. 26

2700


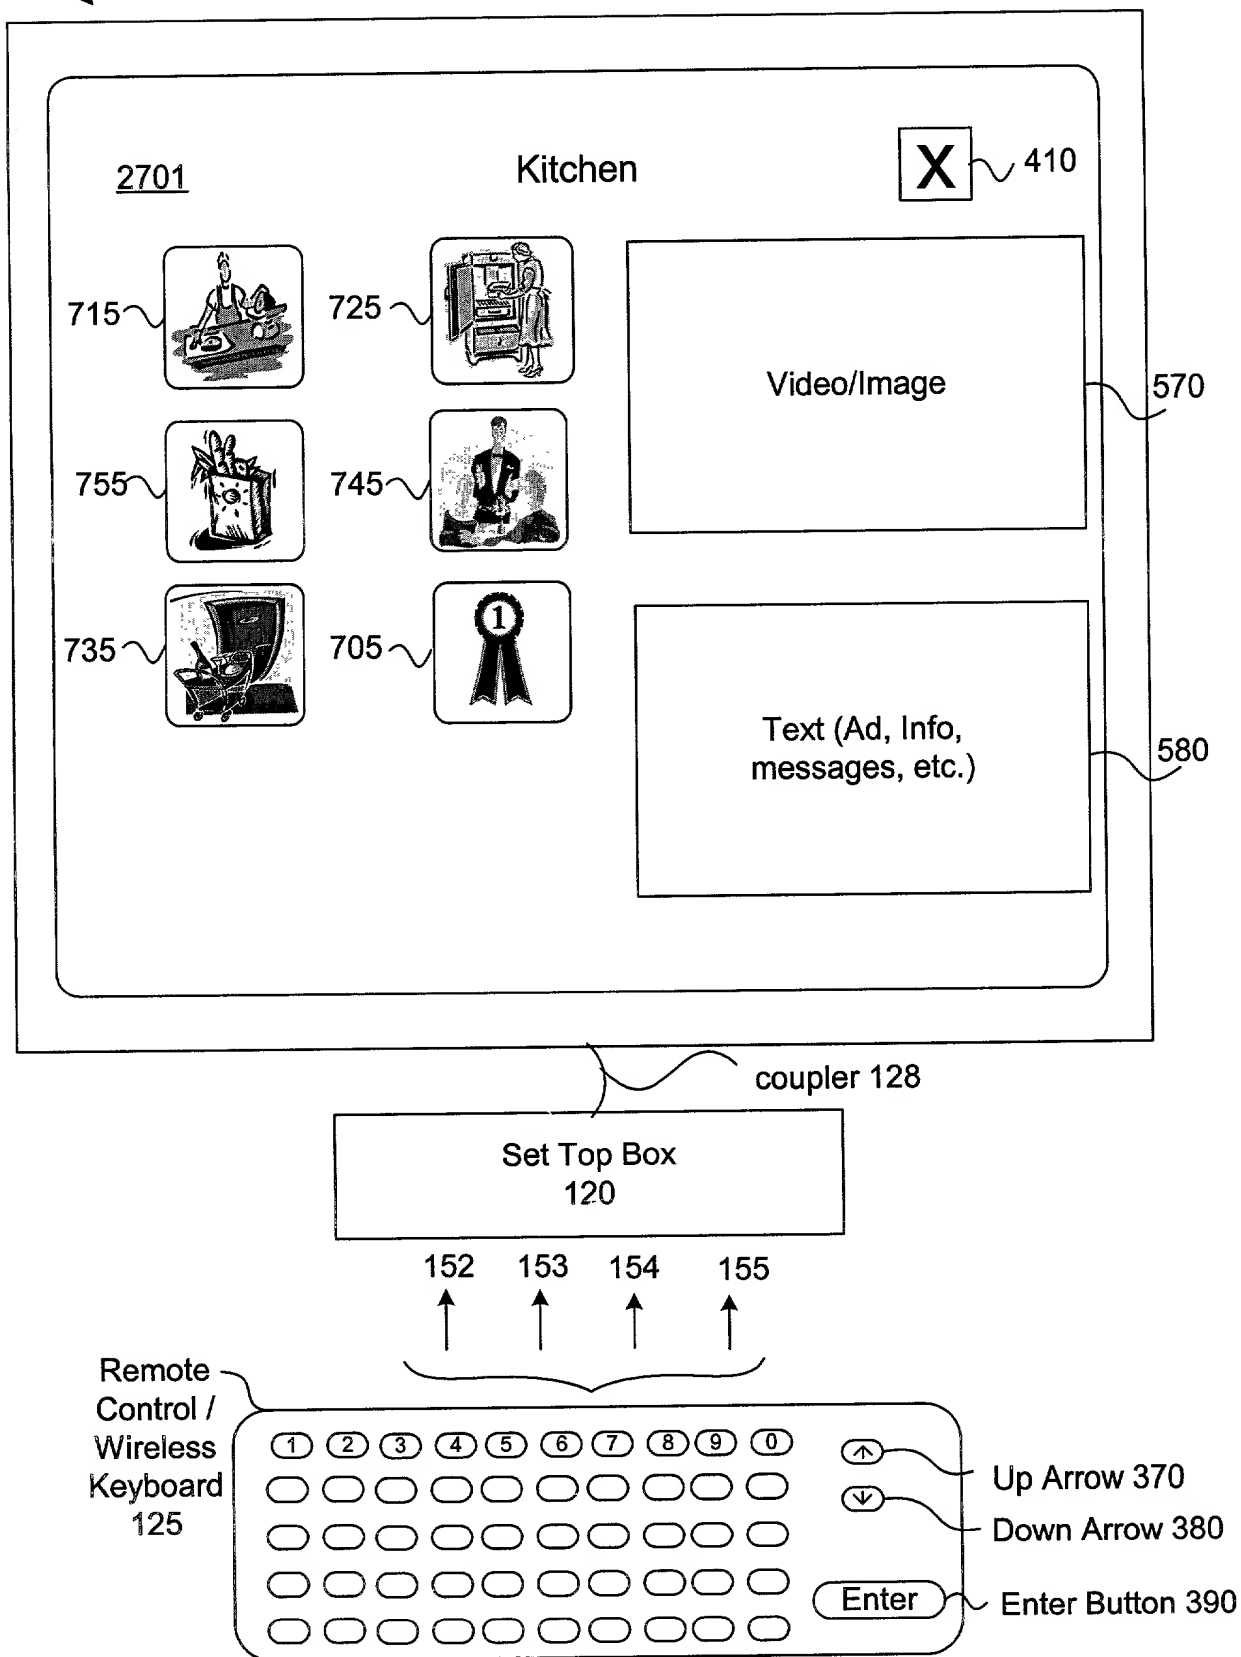 



FIG. 27

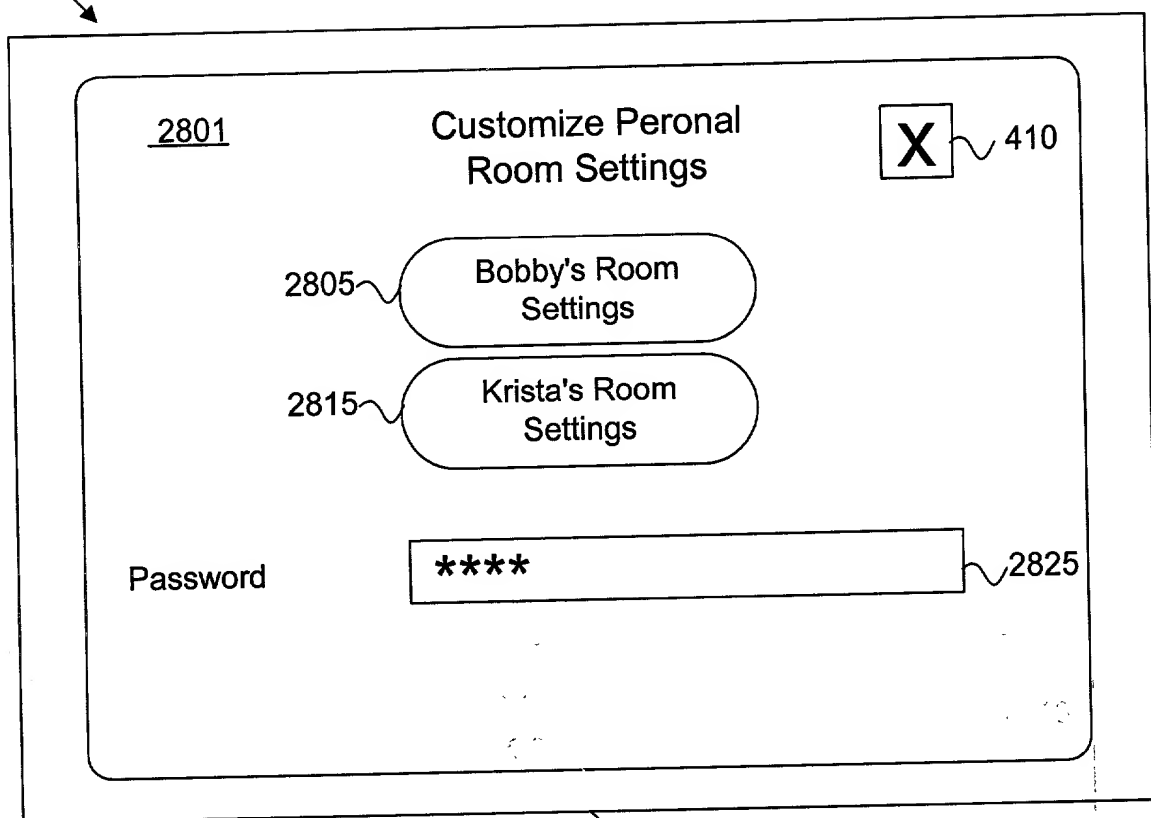 2800



Television
122

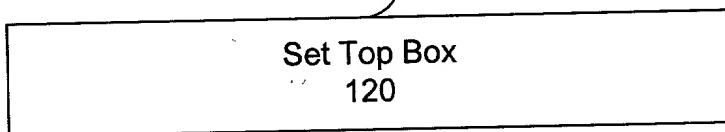 
coupler 128



152 153 154 155



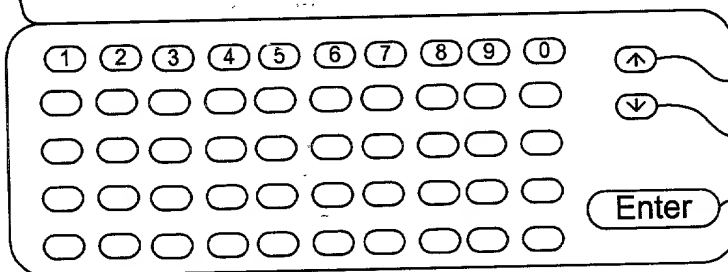 Remote
Control /
Wireless
Keyboard
125



Up Arrow 370

Down Arrow 380

Enter Button 390

FIG. 28